



INSTALLATION
OPERATION
&
MAINTENANCE
INSTRUCTIONS



QUALITY
MANAGEMENT
SYSTEM

▶ **KS-SR** ▶ **KS-SG**

PREFACE

This manual contains instructions for the Installation, Operation and Maintenance of the Kewpump Types KS-SR and KS-SG. This manual covers the standard product plus common options that are available. For special options, supplemental constructions are supplies. This information is provided to insure the long life and safe operation of this pump, therefore, this manual must be read and understood before installation or start-up and kept in a safe place for future reference.

This instruction manual covers two different pump types that are manufactured for a wide range of flow and head requirements and fully complies with ISO 2858 and DIN-24256 standards. Most assembly, disassembly, and inspection procedures are the same for all the pumps. However, where there are differences, they are called out separately within the manual. The design, materials, and workmanship incorporated in the construction of Kewpumps make them capable of giving long, trouble-free service. The life and satisfactory service of any mechanical unit, however, is enhanced and extended by correct application, proper installation, periodic inspection, condition monitoring and careful maintenance. This instruction manual was prepared to assist operators in understanding the construction and the correct methods of installing, operating, and maintenance of these pumps.

Kewpump (M) Sdn. Bhd. shall not be liable for physical injuries, damages, or delays caused by failure to observe the instructions for installation, operation, and maintenance contained in this manual.

Warranty is valid only when genuine Kewpump parts are used.

Use of the equipment on a service other than stated in the order will nullify the warranty, unless written approval is obtained in advance from Kewpump (M) Sdn. Bhd..

This manual contains: -

- ✓ Proper Installation
- ✓ Start-up Procedures
- ✓ Operation Procedures
- ✓ Routine Maintenance
- ✓ Troubleshooting
- ✓ Ordering Spare Parts

Pump Safety Tips

Safety Apparel:

- Insulated work gloves when handling hot bearings or using bearing heater
- Heavy work gloves when handling parts with sharp edges especially impellers
- Steel-toed shoes for foot protection when handling parts, heavy tools, etc.
- Other personal protective equipment to protect against hazardous/toxic fluids

Coupling Guards:

- Never operate a pump without a coupling guard properly installed

Flanged Connections:

- Never force piping to make a connection with a pump
- Use only fasteners of the proper size and material
- Ensure there are no missing fasteners
- Beware of corroded or loose fastener

Operation:

- Do not operate below minimum rated flow, or with suction /discharge valves closed
- Do not open vent or drain valves, or remove plugs while system is pressurised

Maintenance Safety:

- Always lock out power
- Ensure pump is isolated from system and pressure is relieved before disassembling pump, removing plugs, or disconnecting piping
- Use proper lifting and supporting equipment to prevent serious injury
- Observe proper decontamination procedures
- Know and follow company safety regulations

Observe all cautions and warnings highlighted in pump Installation, Operation and Maintenance Instructions.



WARNING

Observe extreme caution when venting and/or draining hazardous liquids. Wear protective clothing in the presence of caustic, corrosive, volatile, flammable, or hot liquids. Do not breathe toxic vapours. Do not allow sparking, flames, or hot surfaces in vicinity of the equipment.

Contents

Page		Section
i	PREFACE	
ii	PUMP SAFETY TIPS	
iii	CONTENTS	
1	INTRODUCTION	1
3	GENERAL INFORMATION	2
5	INSTALLATION	3
19	OPERATION	4
27	PREVENTIVE MAINTENANCE	5
31	DISASSEMBLY & REASSEMBLY	6
51	SPARE PARTS	7
57	WARRANTY STATEMENT	8

1

INTRODUCTION

1.1	Safety-General	-----	1
1.2	Definitions	-----	1
1.3	General Precautions	-----	2

1.1 Safety-General

These pumps have been designed to provide safe and reliable service. However, a pump is both a pressure vessel and a piece of rotating machinery. Therefore, the operator(s) must exercise good judgement and proper safety practices to avoid damage to the equipment, surrounding areas, and to prevent personal injury. It must be understood that the information contained in this manual does not relieve operating and maintenance personnel of the responsibility of exercising normal good judgement in operation and care of these pumps and its components. The safety department at these pumps location must establish a safety program based on a thorough analysis of industrial hazards. This program should be reviewed before the installation and operation of these pumps.

In addition to the hazards of rotating equipment and pressure vessels, considerations must be given to hazards of electrical power, hot oil, high pressure and temperature liquids, toxic liquids and gases, and flammable liquids and gases. Proper installation and care of protective equipment should also be an essential part of any safety program.

Also essential are special precautionary measures to prevent the possibility of applying power to the equipment at any time that maintenance work is in process. In addition, the prevention of rotation due to reverse flow should not be overlooked.

In general, all personnel should be guided by all the basic rules of safety associated with the equipment and the process.

1.2 Definitions

Throughout this manual the words **WARNING**, **CAUTION**, and **NOTE** are used to indicate procedures or situations which require special operator attention:



WARNING

Operating procedure, practice, etc. which, if not correctly followed, could result in personal injury or loss of life.



CAUTION

Operating procedure, practice, etc. which, if not correctly followed, could result in damage or destruction of equipment.



NOTE

Operating procedure, condition, etc. which is essential to observe.

Examples:



WARNING

Pump shall never be operated without coupling guard installed correctly.



CAUTION

Throttling flow from the suction side may cause cavitation and pump damage.



NOTE

Proper alignment is essential for longer pump life.

1.3 General Precautions



WARNING

Personal injuries will result if procedures outlined in this manual are not followed.

- NEVER apply heat to remove impeller. It may explode due to trapped liquid.
- NEVER use heat to disassemble pump due to risk of explosion from trapped liquid.
- NEVER operate pump without coupling guard correctly installed.
- NEVER operate pump beyond the rated conditions to which pump was sold.
- NEVER start pump without proper prime (sufficient liquid in pump casing).
- NEVER run pump below recommended minimum flow or when dry.
- ALWAYS lock out power to the driver before performing pump maintenance.
- NEVER operate pump without safety devices installed.
- NEVER operate pump with discharge valve closed.
- NEVER operate pump with suction valve closed.
- DO NOT change conditions of service without approval of an authorised Kewpump representative.

2 GENERAL INFORMATION

2.1	Pump Description	-----	3
2.2	Nameplate Information	-----	3
2.3	Receiving the Pump	-----	4
	2.3.1 Handling	-----	4
	2.3.2 Storage and Preservation	-----	4

2.1 Pump Description

Type	Pump Description
 KS-SR	General application pump. Back pull-out, end suction, single stage stainless steel centrifugal pump, complies with ISO 2858 and DIN-24256 standards. Flanges are machined and drilled according to ISO 2084-PN16 (BS 4504-1969 Table 16/11. DIN 2501/P1.PN16).
 KS-SG	Chemical Process Pump. Heavy duty designed for reliability. Back pull-out, end suction, single stage 316 stainless steel centrifugal pump, complies with ISO 2858 and DIN-24256 standards. Flanges are machined and drilled according to ISO 2084-PN16 (BS 4504-1969 Table 16/11. DIN 2501/P1.PN16).

2

2.2 Nameplate Information

Every pump has one Kewpump nameplate (Fig. 2-1). The nameplate is located on the bearing bracket or frame adapter, and provides information about the pump type, model, serial number and impeller size in mm.

When ordering spare parts you will need to identify pump type, model, serial number, and the part number of required parts. Information can be taken from the nameplate, while the part number can be found from the parts list in this manual.

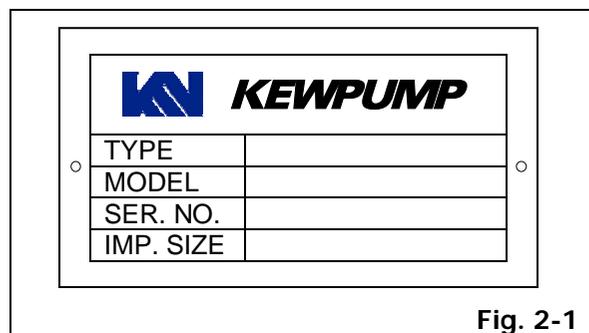


Fig. 2-1

2.3 Receiving the Pump

The complete pump unit should be inspected immediately upon arrival, and any irregularities arising due to shipment reported to the carrier.

Care must be taken during unpacking to avoid damage to the equipment.




2.3.1 Handling



WARNING

Pump and components are heavy. Failure to properly lift and support equipment could result in serious physical injury or damage to pumps. Steel-toed shoes must be worn at all times.

Use care when moving pump. Lifting equipment must be able to adequately support the entire assembly. Hoist bare pump using a suitable sling, under the suction flange and bearing bracket or bearing frame. Complete pump, driver and motor units should be hoisted using slings under the suction flange and driver. Refer to Fig. 2-2 to 2-4 for examples of proper lifting techniques.

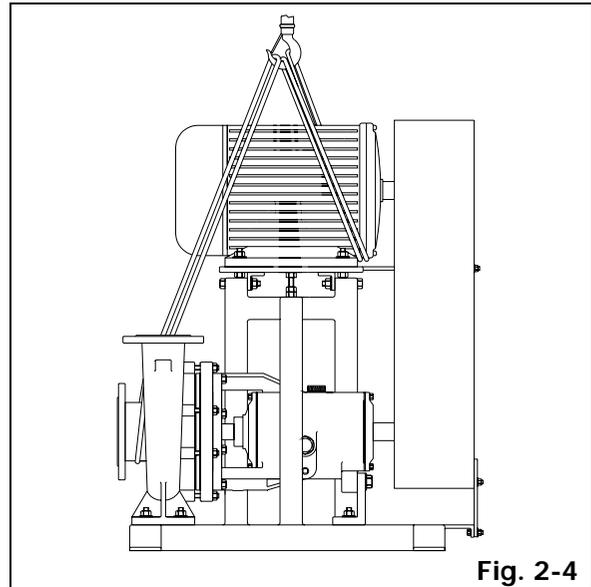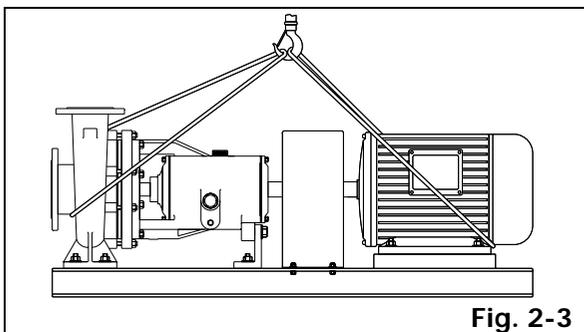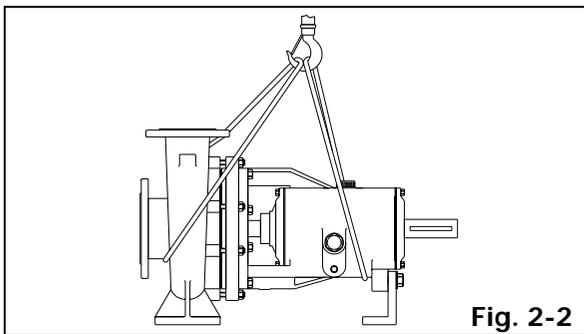

2.3.2 Storage and Preservation

Short Term: (Less than 6 months) The standard shipping and preservation protection is suitable for the period of shipment and installation. Upon receipt, store in a covered, dry and clean location.

Long Term: (More than 6 months) Preservative treatment of bearings and machined surfaces will be required. Rotate shaft several times every 3 months. As a minimum the pump must be stored in a dry, clean and covered place. The unit should be stored in an approximately level position with no strains applied. Flange covers should be left in place. It is recommended to flush the pump and bearing bracket or bearing frame with a suitable rust preventative. Refer to driver and coupling manufacturers for their long term storage procedures.

3

INSTALLATION

3.1	Cleaning the Pump and Baseplate	6
3.2	Location	6
3.3	Foundation	6
3.4	Field Mounting of Driver	6
3.5	Level Baseplate	7
3.6	Alignment	7
3.6.1	Alignment Checks	8
3.6.2	Alignment Criteria	8
3.6.3	Alignment Procedures for Direct Coupled Baseplate Design	8
3.6.3.1	<i>Set Up</i>	8
3.6.3.2	<i>Measurement</i>	9
3.6.3.3	<i>Angular Alignment</i>	9
3.6.3.4	<i>Parallel Alignment</i>	10
3.6.3.5	<i>Complete Alignment</i>	12
3.6.4	Alignment Procedures for V-Belt Driven Baseplate Design	13
3.6.4.1	<i>Set Up</i>	13
3.6.4.2	<i>Measurement</i>	14
3.6.4.3	<i>Angular Alignment</i>	14
3.6.4.4	<i>Parallel Alignment</i>	15
3.6.4.5	<i>Complete Alignment</i>	15
3.6.5	Alignment Troubleshooting	15
3.7	Grout Baseplate	15
3.8	Piping	16
3.8.1	General	16
3.8.2	Suction Piping	17
3.8.3	Discharge Piping	18
3.8.4	Final Piping Check	18

i NOTE

The design of piping systems, foundations and other areas of system design is the responsibility of others. Kewpump data and comments are offered as an aid, but Kewpump cannot assume responsibility for the design and operation.

It is recommended that the customer consult a specialist skilled in the design of foundations, piping, sumps and related systems so as to supplement and interpret Kewpump information and ensure a successful installation.

3.1 Cleaning the Pump and Baseplate

Before putting the pump into operation, the liquid end of the pump should be flushed out with water to remove any rust preventative as well as any foreign matter that may have accumulated during shipment, storage, or installation.

If the pump has been in storage for more than six months, it should be disassembled, inspected and cleaned, as required, before putting it into service.

The underside of the baseplate has to be completely cleaned. It is sometimes necessary to coat the underside of the baseplate with an epoxy primer.

The rust preventative solution from the baseplate can be removed with an appropriate solution.

3.2 Location

Install the pump in an accessible place, as close as possible to the source of the liquid to be pumped. Allow space for operation, inspection and maintenance, and sufficient floor space and headroom for the required crane or hoist service.

Consideration must be given to the environment when pumps are driven by an electric motor. Proper ventilation is necessary, and extremes of dampness and/or heat should be avoided.

3.3 Foundation

The foundation should be sufficiently rigid and substantial enough to absorb any pump vibration and to permanently support the entire pumping unit. Baseplate mounted pumps are normally grouted on a reinforced concrete foundation which is strong enough to support 1½ times the weight of the unit, including driver.

The foundation bolts commonly used are sleeve type (Fig. 3-1) and J Type (Fig. 3-2). Both designs permit movement for final bolt adjustment. It is suggested that the

foundation bolts not be set rigidly until the equipment arrives.

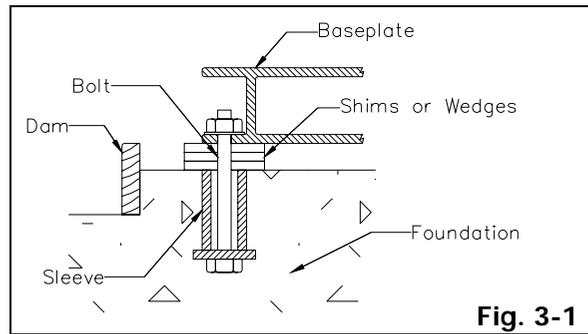


Fig. 3-1

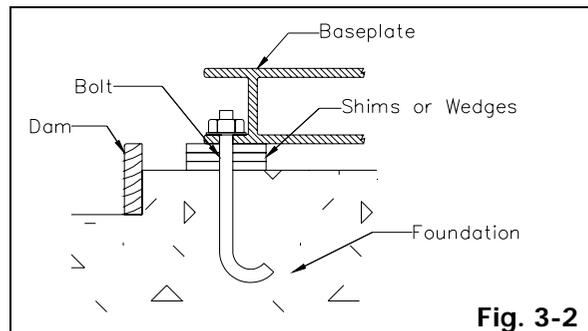


Fig. 3-2

1. Inspect foundation for dust, dirt, oil, chips, water, etc. and remove any contaminants. Do not use oil-based cleaners as grout will not bond to it.
2. Prepare the foundation in accordance with the grout manufacturer's recommendations.

3.4 Field Mounting of Driver

During the assembly of the pump at the factory the run-out of the rotating parts is checked.


Before the pump and driver are aligned as a unit the driver coupling run-out must be checked. Broken shafts sometimes result because of the failure in the field to check the driver shaft run-out.

i NOTE

On units supplied from the factory without driver, but with baseplate, it is required that the driver support be welded in place, in the field, once proper shaft spacing is obtained.

3.5 Level Baseplate

1. Check that the pump shaft is centred from side to side with the baseplate and tighten the pump hold down bolts (only for direct coupled baseplate design).
2. Place two sets of wedges or shims on the foundation, one set on each side of every foundation bolt (Fig. 3-3). The wedges should extend 20mm to 40mm about foundation, to allow for adequate grouting. This will provide even support for the baseplate once it is grouted.

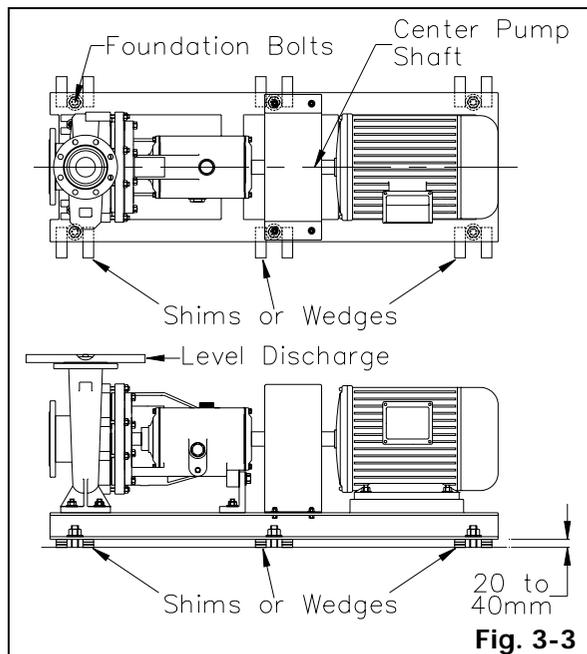

3. Remove water or/and debris from anchor bolt holes/sleeves prior to grouting. If the sleeve type bolts are being used, fill the sleeves with packing or rags to prevent grout from entering.
4. Carefully lower baseplate onto foundation bolts.
5. Level baseplate to within 3mm over length of the baseplate and to within 1.3mm over width of the baseplate by adjusting wedges or changing the number of shims.
6. A level should be placed across the pump mounting pads, driver mounting pads discharge flange and plumb the suction flange to determine levelness.
7. Hand tightens the foundation bolts so that they are snug and recheck levelness.

Adjust wedges or change the number of shims if necessary to maintain flatness.

8. Check to be sure the baseplate is not distorted and that accurate coupling alignment can be achieved.

3.6 Alignment



WARNING

Before beginning any alignment procedure, make sure driver power is locked out. Failure to lock out driver power will result in serious physical injury.

Whether the direct coupled or V-belt driven, correct alignment of the pump and driver is of the utmost importance. In direct coupled drives, misalignment causes unnecessary vibration and wear of the coupling while in V-belt drives, non-parallel shafts cause excessive belt wear.

Pump-Driver combinations are aligned at the factory, but baseplate may be distorted in shipment, and misalignment may occur due to unequal tightening of foundation bolts or pipe strain. It is therefore essential that alignment be checked before the pump is put in service.

The points at which alignment is checked and adjusted are:

- **Initial Alignment** is done prior to operation when the pump and the driver are at ambient temperature.
- **Final Alignment** is done after operation when the pump and driver are at operating temperature.



NOTE

Proper alignment is the responsibility of the installer and user of the unit.

Accurate alignment of the equipment must be attained. Trouble-free operation can be accomplished by following the procedures showed in section 3.6.3 *Alignment Procedures for Direct Coupled Baseplate Design* and 3.6.4 *Alignment Procedures for V-Belt Driven Baseplate Design*.

3.6.1 Alignment Checks

Initial Alignment (Cold Alignment)

- *Before Grouting Baseplate* – To ensure alignment can be obtained.
- *After Grouting Baseplate* – To ensure no changes have occurred during grouting process.
- *After Connecting Piping* – To ensure pipe strains haven't altered alignment. If changes have occurred, alter piping to remove pipe strains on pump flanges.

Final Alignment (Hot Alignment)

- *After First Run* – To obtain correct alignment when both pump and driver are at operating temperature. Thereafter, alignment should be checked periodically in accordance with plant operating procedures.

i NOTE

Alignment check must be made if process temperature changes, piping change and/or pump service is performed.

3.6.2 Alignment Criteria

Good alignment is achieved when the dial indicator or gauge readings as specified in the alignment procedures are:

- 0.05mm Total Indicated Reading (T.I.R) or less when the pump and driver are at operating temperature (Final Alignment).
- 0.0127mm per 25.4mm of dial indicator separation for the reverse dial indicator or laser method when the pump and driver are at operating temperature (Final Alignment).

During the installation phase for direct coupled baseplate design, it is necessary to set the parallel alignment in the vertical direction to different criteria due to differences in expansion rates of the pump and driver. Table below shows the recommended preliminary (cold) settings for electric motor driven pumps based on the different pumped fluid temperatures:

Vertical Cold Alignment Setting for Direct Coupled Baseplate Design	
Pumped Fluid Temp.	Set Motor Shaft
Up to 95°C	0.127mm below pump shaft
95°C to 120°C	Equal to pump shaft
Above 120°C	0.127mm above pump shaft

Driver manufacturers should be consulted for recommended cold setting for other types of drivers (steam turbines, engines, etc.).

3.6.3 Alignment Procedures for Direct Coupled Baseplate Design

3.6.3.1 Set Up

WARNING

Before assembly or disassembly of the coupling guard is performed, the driver must be deenergised, the driver controller/starter put in a locked out position and a caution tag placed at the starter indicating disconnect. Replace coupling guard before resuming normal operation of the pump. Kewpump assumes no liabilities for avoiding these practices.

1. Remove four (4) nuts, bolts and washers from both sides of the coupling guard, and lift off the guard.
2. Check that the pump shaft is level and parallel to the baseplate. Use shims as necessary.
3. Check that the foundation and pump hold down bolts are tight.

For Pin-and-cushion or Spacer Coupling:

1. Disconnect the coupling halves by removing the coupling bolts or spacer.
2. Mount two dial indicators on one of the coupling half (X) so they contact the other coupling half (Y) (Fig. 3-4).
3. Check setting of indicators by rotating coupling half X to ensure indicators stay in contact with coupling half Y but do not bottom out. Adjust indicators accordingly.

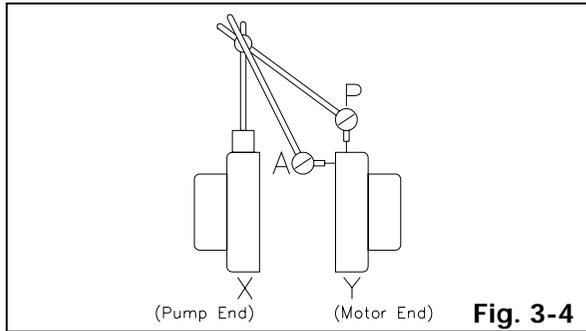


Fig. 3-4

For Rubber Bushing Coupling:

1. Place the straight-edge across both halves of the coupling parallel to the shaft (Fig. 3-5).
2. Use tapered gauge to check the spacing between the periphery of each half of the coupling (Fig. 3-5).

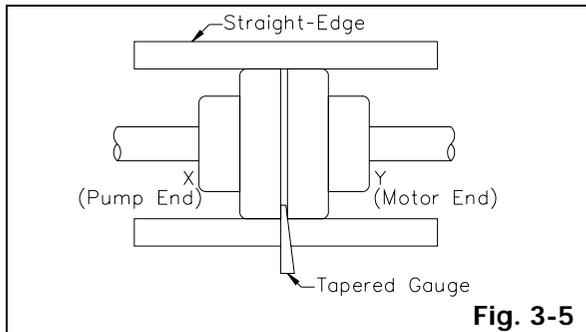


Fig. 3-5

3.6.3.2 Measurement

1. Take indicator or gauge measurement with driver feet hold-down bolts tightened. Loosen hold-down bolts prior to making alignment corrections.
2. Do not adjust the pump or bearing frame support foot to obtain alignment, move only the driver.
3. Take care not to damage indicators or gauge when moving driver during alignment corrections.

3.6.3.3 Angular Alignment

A unit is in angular alignment when indicator A (angular indicator) or tapered gauge readings do not vary by more than 0.05mm as measured at four points 90° apart.

For Pin-and-cushion or Spacer Coupling:

Vertical Correction (Top-to-Bottom)

1. Zero indicator A at top dead centre (12 o'clock) of coupling half Y.
2. Rotate coupling half X to move indicator to bottom dead centre (6 o'clock). Observe needle and record reading.
3. **Negative Reading** – The coupling halves are further apart at the bottom than at the top. Correct by either raising the driver feet at the shaft end (add shims) or lowering the driver feet at the other end (remove shims).

Positive Reading – The coupling halves are closer at the bottom than at the top. Correct by either lowering the driver feet at the shaft end (remove shims) or raising the driver feet at the other end (add shims) (Fig. 3-6).

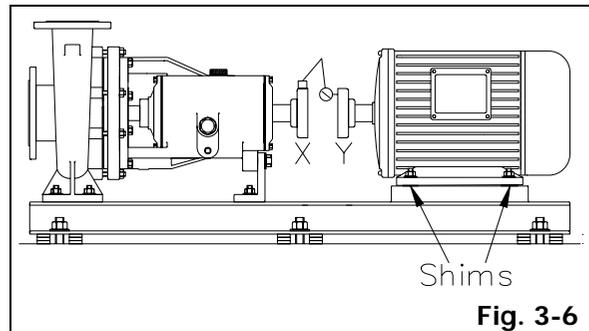


Fig. 3-6

4. Repeat steps 1 through 3 until indicator A reads 0.05mm or less.

Horizontal Correction (Side-to-Side)

1. Zero indicator A on the left side of coupling half Y, 90° from top dead centre (9 o'clock).
2. Rotate coupling half X to move indicator through top centre to the right side, 180° from the start (3 o'clock). Observe needle and record reading.
3. **Negative Reading** – The coupling halves are further apart on the right side than the left. Correct by either sliding the shaft end of the driver to the left or the other end to the right.

Positive Reading – The coupling halves are closer together on the right side than the left. Correct by either sliding the shaft end of the driver to the right or the other end to the left (Fig. 3-7).

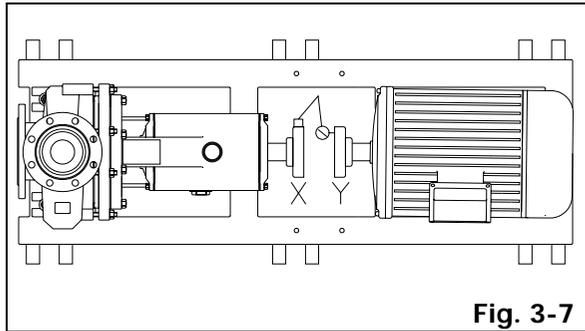


Fig. 3-7

4. Repeat steps 1 through 3 until indicator A reads 0.05mm or less.
5. Re-check both horizontal and vertical readings to ensure adjustment of one did not disturb the other. Correct as necessary.

For Rubber Bushing Coupling:

Vertical Correction (Top-to-Bottom)

1. Place the tapered gauge between the coupling halves at top dead centre (12 o'clock). Record the reading on the gauge.
2. Move the tapered gauge to bottom dead centre (6 o'clock). Record the reading again.
3. **First Reading < Second Reading** – The coupling halves are further apart at the bottom than at the top. Correct by either raising the driver feet at the shaft end (add shims) or lowering the driver feet at the other end (remove shims).

First Reading > Second Reading – The coupling halves are closer at the bottom than at the top. Correct by either lowering the driver feet at the shaft end (remove shims) or raising the driver feet at the other end (add shims) (Fig. 3-8).

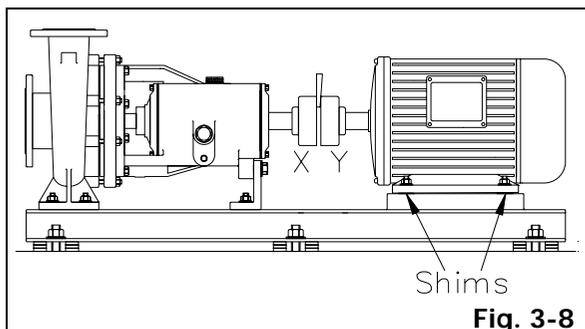


Fig. 3-8

4. Repeat steps 1 through 3 until the different between the first reading and the second reading is 0.05mm or less.

Horizontal Correction (Side-to-Side)

1. Place the tapered gauge between the coupling halves on the left side of coupling half Y, 90° from the top dead centre (9 o'clock). Record the reading on the gauge.
2. Move the tapered gauge to the right side, 180° from the start (3 o'clock). Record the reading again.
3. **First Reading < Second Reading** – The coupling halves are further apart on the right side than the left. Correct by either sliding the shaft end of the driver to the left or the other end to the right.

First Reading > Second Reading – The coupling halves are closer together on the right side than the left. Correct by either sliding the shaft end of the driver to the right or the other end to the left (Fig. 3-9).

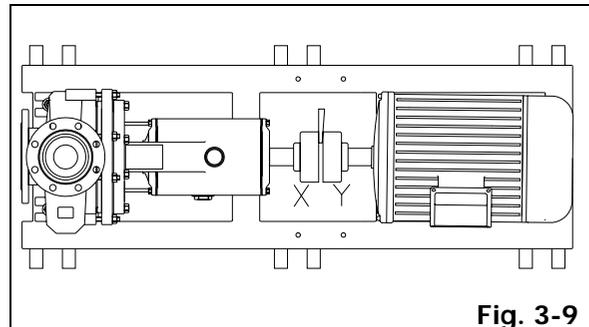


Fig. 3-9

4. Repeat steps 1 through 3 until the different between the first reading and the second reading is 0.05mm or less.
5. Re-check both horizontal and vertical readings to ensure adjustment of one did not disturb the other. Correct as necessary.

3.6.3.4 Parallel Alignment

A unit is in parallel alignment when indicator P (parallel indicator) or gaps between the straight-edge and coupling do not vary by more than 0.05mm as measured at four points 90° apart at operating temperature. Note the


preliminary vertical cold setting criteria in section 3.6.2 *Alignment Criteria*.

For Pin-and-cushion or Spacer Coupling:

Vertical Correction (Top-to-Bottom)

1. Zero indicator P at top dead centre (12 o'clock) of coupling half Y.
2. Rotate coupling half X to move indicator to bottom dead centre (6 o'clock). Observe needle and record reading.
3. **Negative Reading** – Coupling half X is lower than coupling half Y. Correct by removing shims of thickness equal to half of the indicator reading from each driver foot.

Positive Reading – Coupling half X is higher than coupling half Y. Correct by adding shims of thickness equal to half of the indicator reading to each driver foot (Fig. 3-10).

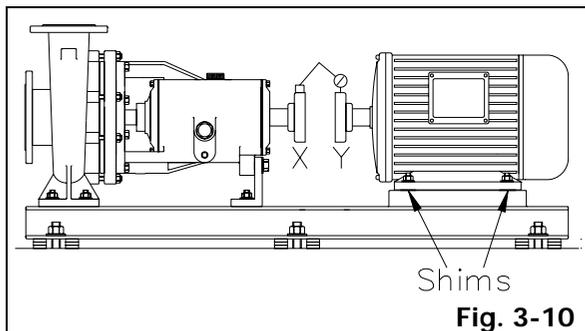

i NOTE

Equal amounts of shims must be added to or removed from each driver foot. Otherwise the vertical angular alignment will be affected.

4. Repeat steps 1 through 3 until indicator P reads 0.05mm or less when hot, or per table in section 3.6.2 *Alignment Criteria* when cold.


Horizontal Correction (Side-to-Side)

1. Zero indicator P on the left side of coupling half Y, 90° from top dead centre (9 o'clock).
2. Rotate coupling half X to move indicator through top centre to the right side, 180°

from the start (3 o'clock). Observe needle and record reading.

3. **Negative Reading** – Coupling half Y is to the left of coupling half X. Correct by sliding driver evenly in the appropriate direction.

Positive Reading – Coupling half Y is to the right of coupling half X. Correct by sliding driver evenly in the appropriate direction (Fig. 3-11).

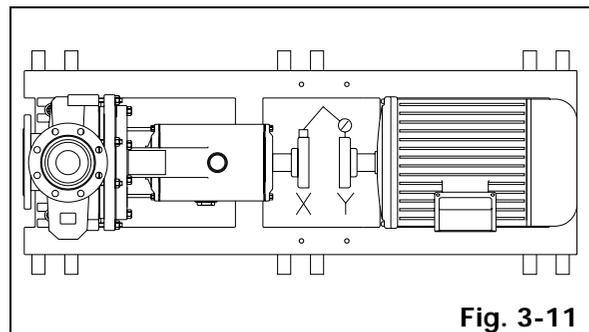

i NOTE

Failure to slide driver evenly will affect horizontal angular correction.

4. Repeat steps 1 through 3 until indicator P reads 0.05mm or less.
5. Re-check both horizontal and vertical readings to ensure adjustment of one did not disturb the other. Correct as necessary.

For Rubber Bushing Coupling:

Vertical Correction (Top-to-Bottom)

1. Place the straight-edge on the coupling halves at top dead centre (12 o'clock). Record the distance of the gap, D_1 between the straight-edge and coupling (D_1 is positive value if gap exists on coupling half Y, and vice versa).
2. Move the straight-edge to bottom dead centre (6 o'clock). Record the distance of the gap, D_2 between the straight-edge and coupling (D_2 is negative value if gap exists on coupling half Y, and vice versa).
3. **$D_1 + D_2 = \text{Negative Value}$** – Coupling half X is lower than coupling half Y. Correct by removing shims of thickness

equal to half of $|D_1+D_2|$ from each driver foot.

$D_1+D_2 = \text{Positive Value}$ – Coupling half X is higher than coupling half Y. Correct by adding shims of thickness equal to half of $|D_1+D_2|$ to each driver foot (Fig. 3-12).

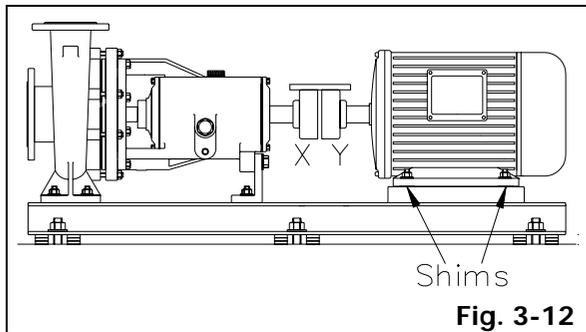


Fig. 3-12

i NOTE

Equal amounts of shims must be added to or removed from each driver foot. Otherwise the vertical angular alignment will be affected.

4. Repeat steps 1 through 3 until $|D_1+D_2|$ is 0.05mm or less when hot, or per table in section 3.6.2 Alignment Criteria when cold.

Horizontal Correction (Side-to-Side)

1. Place the straight-edge on the coupling halves on the left side of coupling half Y, 90° from top dead centre (9 o'clock). Record the distance of the gap, D_1 between the straight-edge and coupling (D_1 is positive value if gap exists on coupling half Y, and vice versa).
2. Move the straight-edge to the right side, 180° from the start (3 o'clock). Record the distance of the gap, D_2 between the straight-edge and coupling (D_2 is negative value if gap exists on coupling half Y, and vice versa).
3. **$D_1+D_2 = \text{Negative Reading}$** – Coupling half Y is to the left of coupling half X. Correct by sliding driver evenly in the appropriate direction.

$D_1+D_2 = \text{Positive Reading}$ – Coupling half Y is to the right of coupling half X. Correct by sliding driver evenly in the appropriate direction (Fig. 3-13).

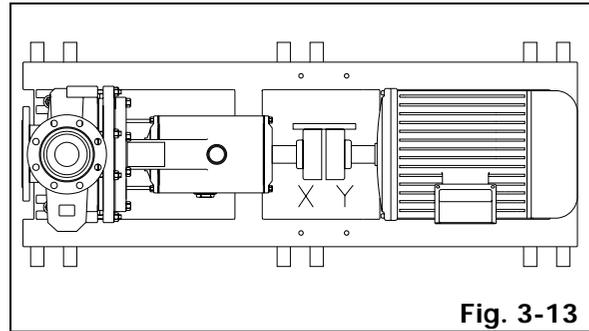


Fig. 3-13

i NOTE

Failure to slide driver evenly will affect horizontal angular correction.

4. Repeat steps 1 through 3 until $|D_1+D_2|$ is 0.05mm or less.
5. Re-check both horizontal and vertical readings to ensure adjustment of one did not disturb the other. Correct as necessary.

3.6.3.5 Complete Alignment

A unit is complete alignment when both indicators A (angular) and P (parallel) or both tapered gauge readings and gaps between the straight-edge and coupling do not vary by more than 0.05mm as measured at four points 90° apart.

For Pin-and-cushion or Spacer Coupling:

Vertical Correction (Top-to- Bottom)

1. Zero indicators A and P at top dead centre (12 o'clock) of coupling half Y.
2. Rotate coupling half X to move indicators to bottom dead centre (6 o'clock). Observe needles and record readings.
3. Make corrections as outlined previously.

Horizontal Correction (Side-to-Side)

1. Zero indicators A and P on the left side of coupling half Y, 90° from top dead centre (9 o'clock).
2. Rotate coupling half X to move indicators through top centre to the right side, 180° from the start (3 o'clock). Observe needles and record readings.

3. Make corrections as outlined previously.
4. Recheck both vertical and horizontal readings to ensure adjustment of one did not disturb the other. Correct as necessary.

For Rubber Bushing Coupling:

Vertical Correction (Top-to- Bottom)

1. Place the tapered gauge between the coupling halves and straight-edge on the coupling halves at top dead centre (12 o'clock). Record the reading on the gauge and distance of the gap, D_1 between the straight-edge and coupling (D_1 is positive value if gap exists on coupling half Y, and vice versa).
2. Move the tapered gauge between the coupling halves and straight-edge on the coupling halves to bottom dead centre (6 o'clock). Record the reading on the gauge again and distance of the gap, D_2 between the straight-edge and coupling (D_2 is negative value if gap exists on coupling half Y, and vice versa).
3. Make corrections as outlined previously.

Horizontal Correction (Side-to-Side)

1. Place the tapered gauge between the coupling halves and straight-edge on the coupling halves on the left side of coupling half Y, 90° from the top dead centre (9 o'clock). Record the reading on the gauge and distance of the gap, D_1 between the straight-edge and coupling (D_1 is positive value if gap exists on coupling half Y, and vice versa).
2. Move the tapered gauge between the coupling halves and straight-edge on the coupling halves to the right side, 180° from the start (3 o'clock). Record the reading on the gauge again and distance of the gap, D_2 between the straight-edge and coupling (D_2 is negative value if gap exists on coupling half Y, and vice versa).
3. Make corrections as outlined previously.
4. Recheck both vertical and horizontal readings to ensure adjustment of one did

not disturb the other. Correct as necessary.

i NOTE

With experience, the installer will understand the interaction between angular and parallel and will make corrections appropriately.


3.6.4 Alignment Procedures for V-Belt Driven Baseplate Design

3.6.4.1 Set Up

⚠ WARNING

Before assembly or disassembly of the driving belts guard is performed, the driver must be deenergised, the driver controller/starter put in a locked out position and a caution tag placed at the starter indicating disconnect. Replace driving belts guard before resuming normal operation of the pump. Kewpump assumes no liabilities for avoiding these practices.

1. Remove two (2) nuts, bolts and washers from the driving belts guard, and take off the guard.
2. Check that the pump shaft is level and parallel to the baseplate. Use shims as necessary.
3. Check that the foundation and pump hold down bolts are tight.
4. Lower the driver mounting pad by using adjustment jackscrew below the pad to loosen tension of the V-Belts. Remove V-belts to disconnect pulleys.
5. Place the straight-edge across both pulleys tangent to the shaft (Fig. 3-14).

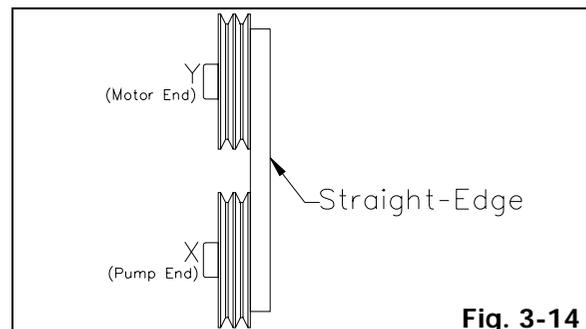

3.6.4.2 Measurement

1. Take gap measurement with driver feet hold-down bolts tightened. Loosen hold-down bolts prior to making alignment corrections.
2. Do not adjust the pump or bearing frame support foot to obtain alignment, move only the driver.


3.6.4.3 Angular Alignment

A unit is in angular alignment when gap between straight-edge and pulley Y is uniform and does not vary by more than 0.05mm as measured at four point 90° apart.

Vertical Correction (Top-to-Bottom)

1. Hold one end of the straight-edge parallel to pulley X, and the other end at top dead centre (12 o'clock) of pulley Y.
2. If straight-edge hits pulley Y at top dead centre, slightly move driver backward until gap exists between straight-edge and pulley Y. Record the distance of the gap, T.
3. Swing the straight-edge from top to bottom dead centre (6 o'clock). Record the distance of the gap between straight-edge and pulley Y, B.
4. **B > T** – The pulley Y is further away at the bottom than at the top. Correct by either raising the driver feet at the shaft end (add shims) or lowering the driver feet at the other end (remove shims).

B < T – The pulley Y is closer at the bottom than at the top. Correct by either lowering the driver feet at the shaft end (remove shims) or raising the driver feet at the other end (add shims) (Fig. 3-15).

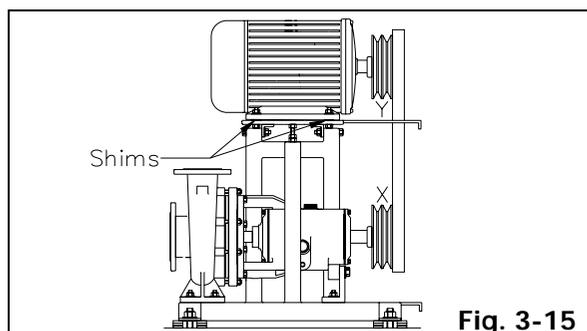


5. Repeat steps 1 through 4 until the different between T and B is 0.05mm or less.

Horizontal Correction (Top-to-Top)

1. Hold one end of the straight-edge parallel to pulley X, and the other end on the left side of pulley Y, 90° from top dead centre (9 o'clock).
2. If straight-edge hits pulley Y on the left side, slightly move driver backward until gap exists between straight-edge and pulley Y. Record the distance of the gap, L.
3. Swing the straight-edge from the left side, through top dead centre to the right side, 180° from the start (3 o'clock). Record the distance of the gap between straight-edge and pulley Y, R.
4. **R > L** – The pulley Y is further away on the right side than the left. Correct by either sliding the shaft end of the driver to the left or the other end to the right.

R < L – The pulley Y is closer on the right side than the left. Correct by either sliding the shaft end of the driver to the right or the other end to the left (Fig. 3-16).

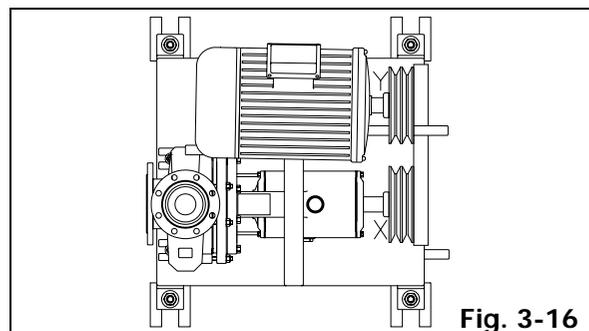

5. Repeat steps 1 through 4 until the different between L and R is 0.05mm or less.
6. Re-check both horizontal and vertical readings to ensure adjustment of one did not disturb the other. Correct as necessary.

3.6.4.4 Parallel Alignment

A unit is in parallel alignment when gap between straight-edge and pulley Y is not more than 0.05mm as measured at any points.

1. Hold one end of the straight-edge parallel to pulley X, and the other end at any point of pulley Y.
2. Record the distance of the gap between straight-edge and pulley Y.
3. If the gap is more than 0.05mm, correct by sliding driver evenly in the forward direction.

i NOTE

Failure to slide driver evenly will affect horizontal angular correction.

4. Repeat steps 1 through 3 until the gap between straight-edge and pulley Y is 0.05mm or less.

3.6.4.5 Complete Alignment

A unit is in complete alignment when gap between straight-edge and pulley Y is uniform and not more than 0.05mm as measured at any point.

1. Hold one end of the straight-edge on pulley X and swing the other end over pulley Y.
2. Observe the distance of the gap between straight-edge and pulley Y when straight-edge swinging over pulley Y.
3. Make corrections as outlined previously.
4. Recheck both vertical and horizontal readings to ensure adjustment of one did not disturb the other. Correct as necessary.

i NOTE

With experience, the installer will understand the interaction between angular and parallel and will make corrections appropriately.

3.6.5 Alignment Troubleshooting

Cannot Obtain Horizontal (Side-to-Side) Alignment, Angular or Parallel


1. *Driver feet bolt bound* – Loosen pump hold down bolts and slide pump and driver until horizontal alignment is achieved.
2. *Baseplate not levelled properly, probably twisted* – Determine which corner(s) of the baseplate are high or low and remove or add shims at the appropriate corner(s) and realign.

3.7 Grout Baseplate

i NOTE

Do not grout until the unit has been properly levelled.

1. Clean areas of baseplate that will contact grout. Do not use oil-based cleaners because grout will not bond to it. Refer to grout manufacturer's instruction.
2. Built dam around foundation. Thoroughly wet foundation (Fig. 3-17).
3. Pour grout through grout holes on baseplate, or through the ends, up to level of dam. Remove air bubbles from grout as it is poured by puddling, using a vibrator, or pumping the grout into place. Non-shrink grout is recommended.

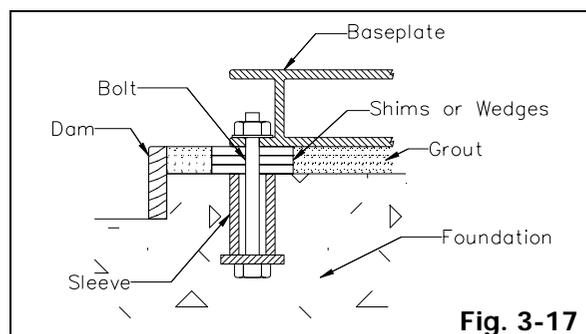

4. Allow grout to set.
5. Fill remainder of baseplate with grout. Remove air as before (Fig. 3-18).

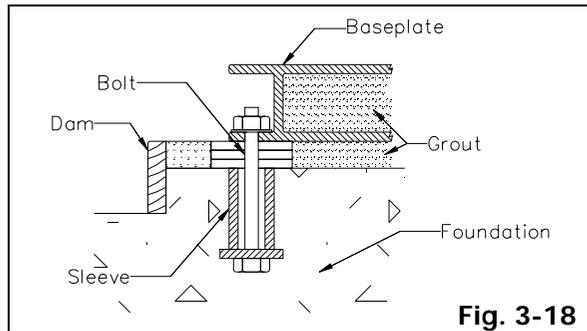


Fig. 3-18

6. Allow grout to set at least 48 hours.
7. Tighten foundation bolts.
8. Re-check alignment before continuing, using methods previously described.

3.8 Piping

3.8.1 General

Guidelines for piping are given in the "Hydraulic Institute Standards" available from: Hydraulic Institute, 9 Sylvan Way, Parsippany, NJ 07054-3802 and must be reviewed prior to pump installation.



WARNING

Never draw piping into place by forcing at the flange connections of the pump. This may impose dangerous strains on the unit and cause misalignment between pump and driver. Pipe strain will adversely effect the operation of the pump resulting in physical injuries and damages to the equipment.

1. All piping must be supported independently of, and line up naturally with, the pump flanges.
2. Provision must be made to support suction and discharge piping to the pump to prevent excessive nozzle loads and maintain pump-driver alignment.
3. Piping runs should be as short as possible to minimise frictional losses.
4. **DO NOT** connect piping to pump until grout has hardened and pump and driver hold-down bolts have been tightened.

5. It is suggested that expansion loops or joints, if used, be properly installed in suction and/or discharge lines when handling liquids at elevated temperatures, so linear expansion of piping will not draw pump out of alignment.

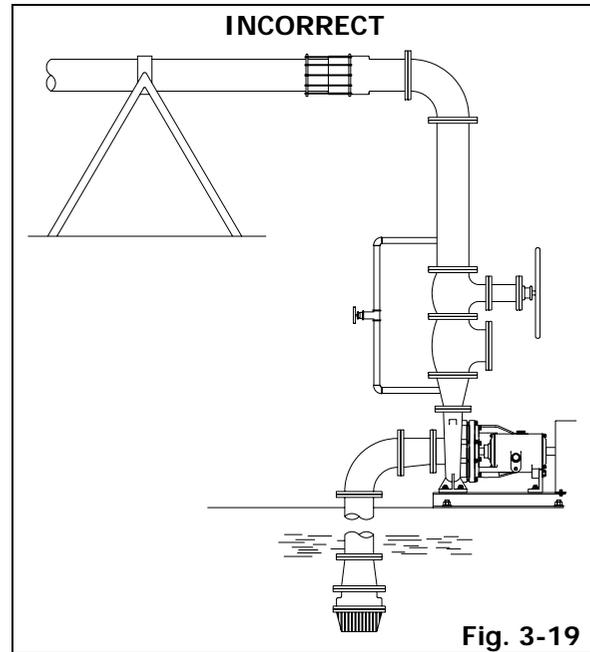


Fig. 3-19

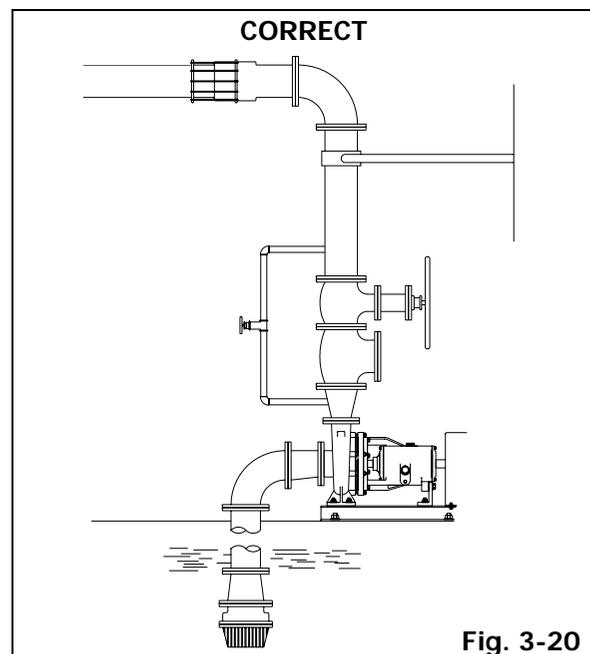


Fig. 3-20



6. The piping should be arranged to allow pump flushing prior to removal of the unit on services handling corrosive liquids.
7. Carefully clean all pipes parts, valves and fittings, and pump branches prior to assembly.

3.8.2 Suction Piping




CAUTION
NPSH_A must always exceed NPSH_R. Reference Hydraulic Institute for NPSH and pipe friction values needed to evaluate suction piping.

Properly installed suction piping is a necessity for trouble-free pump operation. Suction piping should be flushed **BEFORE** connection to the pump and is absolutely leakproof.

1. Use of elbows close to the pump suction flange should be avoided. There should be a minimum of two pipe diameters of straight pipe between the elbow and suction inlet. Where used, elbows should be long radius (Fig. 3-21).

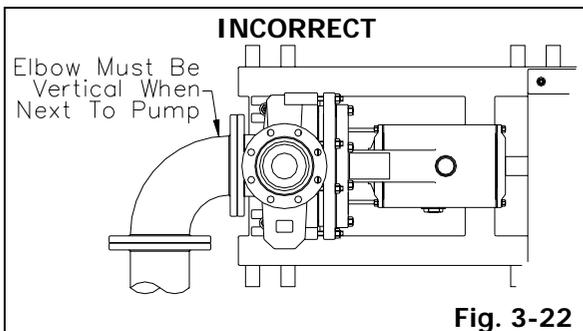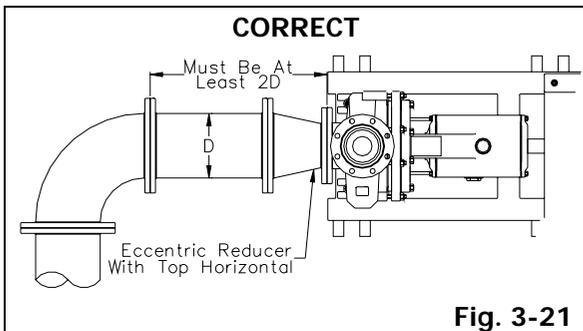

2. Use suction pipe one or two sizes larger than the pump suction, with a reducer at the suction flange. **Suction piping should never be of smaller diameter than the pump suction.** The flow velocity should not exceed 2m/s at rated flow rate.
3. Reducers should be eccentric at the pump suction flange with **sloping side down** (Figs. 3-23, 3-24 and 3-25).

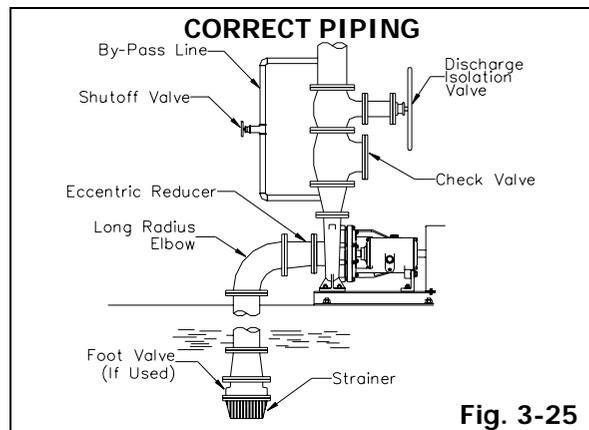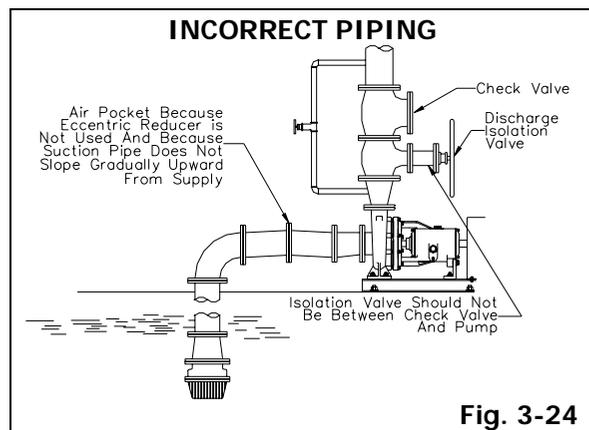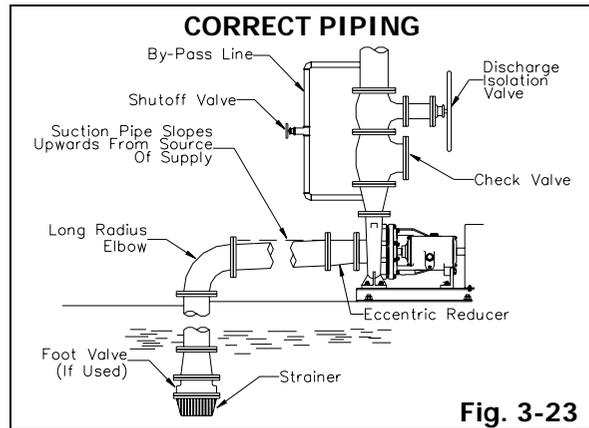

CAUTION
Pump must never be throttled on suction side.

4. Suction strainers, when used, must have a net "free area" of at least three times the suction pipe area.
5. A differential gauge can be used to monitor the strainer and allow the pump to be shut down before the debris blocks the strainer such that the pump is damaged. At this point the strainer should be cleaned and reinstalled, when the scale

and dirt have been removed from the system by no further changes in pressure or pressure drops across the screen, the strainer may be removed.

6. The suction pipe must be adequately submerged below the liquid surface to prevent vortices and air entrapment at the supply.
7. Separate suction lines are recommended when more than one pump is operating from the same source of supply.

Suction Lift Conditions

1. Arrange the length and size of suction pipe so that the maximum suction lift, including all losses, will not exceed the $NPSH_R$ of the pump.
2. Hot liquids must flow to the pump under sufficient positive head to prevent vaporisation at the impeller inlet.
3. Suction pipe must be free from air pockets.
4. Suction piping must **slope upwards** to the pump suction flange from the source of supply.
5. Horizontal suction pipes should have a **gradual rise**. Do not install any part or section of a horizontal suction pipe **higher than** the pump suction flange.
6. Whenever another pipe or other obstruction requires bending from the natural slope, run the suction pipe under the obstruction rather than above it.
7. All joints must be **air tight**.
8. A means of priming the pump must be provided, such as a foot valve.

Suction Head / Flooded Suction Conditions

1. An **isolation valve should be installed in the suction line** at least two pipe diameters from the suction to permit closing of the line for pump inspection and maintenance.
2. Keep suction pipe free from air pocket.

3. Piping should be **level or slope gradually downward** from the source of supply.
4. No portion of the piping should extend **below** pump suction flange.
5. The size of entrance from supply should be one or two sizes larger than the suction pipe.

3.8.3 Discharge Piping

1. Use of elbows close to the pump discharge flange should be avoided.
2. Use discharge pipe one or two size larger than the pump discharge. **Discharge piping should never be of smaller diameter than the pump discharge.** The flow velocity in the delivery line should not exceed 3m/s.
3. **Isolation and check valves should be installed in discharge line.** Locate the check valve between isolation valve and pump; this will permit inspection of the check valve. The isolation valve is required for priming, regulation of flow, and for inspection and maintenance of pump. The check valve prevents pump or seal damage due to reverse flow through the pump when the driver is turned off.
4. Increasers, if used, should be placed between pump and check valves.
5. Cushioning devices should be used to protect the pump from surges and water hammer if quick-closing valves are installed in system.

3.8.4 Final Piping Check

After connecting the piping to pump:

1. Rotate shaft several times by hand to be sure that there is no binding and all parts are free.
2. Check alignment, per alignment procedures outlined previously to determine absence of pipe strain. If pipe strain exists, correct piping.

4

OPERATION

4.1	Preparation for Start-Up	19
4.1.1	Checking Rotation	19
4.1.2	Couple Pump and Driver	19
4.1.3	Lubricating Bearings	20
4.1.4	Shaft Sealing	20
4.1.5	Priming Pump	21
4.2	Starting Pump	22
4.3	Operation	22
4.3.1	General Considerations	22
4.3.2	Operating Checks	23
4.3.3	Operating Troubleshooting	23
4.4	Shutdown	25
4.5	Final Alignment	26

4.1 Preparation for Start-Up

4.1.1 Checking Rotation

CAUTION
Serious damage may result if pump is run in the wrong rotation. Therefore before connecting coupling halves or installing V-Belts, rotation of driver must be checked to make sure that it rotates in correct direction.

1. Lock out power to driver.

WARNING
Lock out driver power to prevent accidental start-up and physical injury.

2. Make sure coupling or pulley hub is securely fastened to driver shaft.
3. Unlock driver power.
4. Make sure everyone is clear. Jog driver just long enough to determine direction of

rotation. Rotation must correspond to arrow labelled either on bearing bracket (301), adaptor extension ring (221) or frame adaptor (220).

5. Lock out power to driver.

4.1.2 Couple Pump and Driver

WARNING
Lock out driver power to prevent accidental rotation and physical injury.


Direct Coupling

1. Connect coupling halves per manufacturer's instructions.
2. Install coupling guard.

V-Belt Driven

1. Install V-Belts per manufacturer's instruction.

2. Raise the driver mounting pad by using adjustment jackscrew below the pad to increase tension of the V-Belts.
3. Check tension of the V-Belts as shown in Fig. 4-1. Tension adjustment is completed if reading shows 12mm to 15mm.

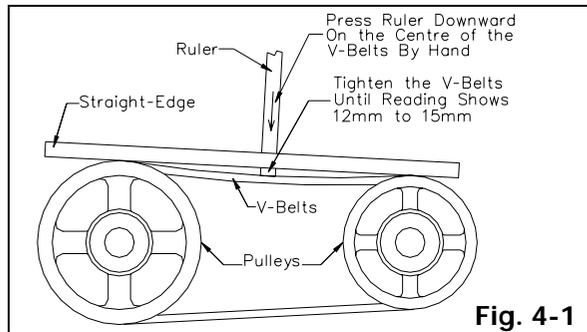

4. Install driving belts guard.



WARNING

Never operate a pump without coupling or driving belts guard properly installed. Personal injury will occur if pump is run without coupling or driving belts guard.

4.1.3 Lubricating Bearings



CAUTION

The pumps are shipped with the bearing brackets or bearing frames empty of oil. Bearings must be lubricated at the job site.




WARNING

Operation of the unit without proper lubrication can result in overheating of the bearings, causing bearing failures, pump seizures, and actual breakup of the equipment, and exposing operating personnel to personal injuries.

Oil lubricated bearings are furnished in the pump. High quality turbine oil which is non-detergent, and has anti-rust and anti-oxidant additives should be used to fill the bearing bracket or bearing frame. The grade of oil should be ISO viscosity grade 100 (between SAE grade 30 and 40).

1. Remove oil cover (330) from bearing bracket (301) or bearing frame (300).

2. Fill bearing bracket (301) or bearing frame (300) with proper lubricating oil through the oil connection hole until oil level is at the centre of the oil gauge (331).
3. If excessive amount of oil has been filled in, drain the excessive oil by removing the bearing bracket or bearing frame drain plug (400) until the correct oil level is reached.
4. Replace oil cover (330) (Fig. 4-2).

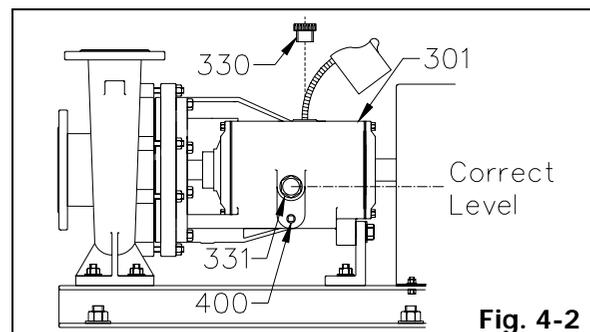

5. If the pump is put into operation after a prolonged shut down, flush out the bearings (310 for KS-SR or 311 and 312 for KS-SG) and bearing bracket (301) or bearing frame (300) with light oil to remove contaminants. During flushing, rotate the shaft (130) slowly by hand. After complete removal of the cleaning agent through bearing bracket or bearing frame drain hole, flush the bearing bracket (301) or bearing frame (300) with proper lubricating oil to ensure oil quality after cleaning.

4.1.4 Shaft Sealing

Mechanical Sealing

On pumps supplied with mechanical seals a variety of seal types are available for the different types of service and application. When mechanical seals are supplied they have been installed and adjusted before the pump was shipped, therefore no attention is required.



CAUTION

All seals must not be run dry or in abrasives.

Gland Packing

The gland packing is left only finger tight when the pump leaves the factory, and it must be possible to rotate shaft by hand. Under normal service conditions, the packing is lubricated by leakage of the liquid through the packing. Therefore, a packed gland must leak and leakage should take place as soon as the stuffing box cover is pressurised. Final adjustment of packing gland is made after pump is started.



CAUTION

Packing glands must never be tightened to the point where leakage from the packing is stopped. A small amount of leakage is required for lubrication of the packing. Shutting off leakage flow from the packing will result in burned packing and scored shaft sleeve.

4.1.5 Priming Pump



CAUTION


Never start the pump until it has been properly primed. Before starting or while operating the pump, the casing and suction line must be completely filled with the liquid being pumped. The rotating parts depend on this liquid for lubrication and the pump may seize if operated without liquid.

Several different methods of priming can be used, depending upon type of installation and service involved.

Suction Head Conditions

1. Slowly open the suction valve (Fig. 4-3).
2. If the pump is to handle hot liquid, open the suction valve to allow a very slight flow of liquid into the pump, thereby heating the pump slowly and evenly.
3. Close the discharge valve and open air vent on the discharge piping until liquid flows out.
4. Rotate the shaft (130) a few revolutions to make sure no air is trapped in the impeller (120) and suction pipe.
5. Close the vent valve.


6. Open the suction valve wide before starting the pump.

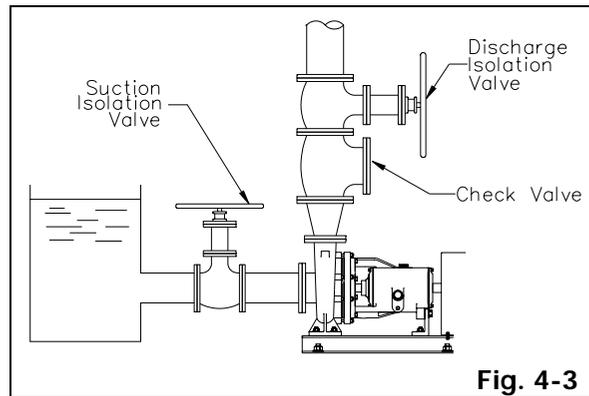

Suction Lift Conditions

A foot valve and outside source of liquid may be used to prime the pump. Outside source of liquid can come from a self-priming pump, pressurised discharge line, or other outside supply (Fig. 4-4 and 4-5).

1. Close discharge valve and open air vent on the discharge piping.
2. Open valve in outside supply line until only liquid escapes from vent valve.
3. If the pump is to handle hot liquid, open the outside supply line valve to allow a very slight flow of liquid into the pump, thereby heating the pump slowly and evenly.
4. Rotate the shaft (130) a few revolutions to make sure no air is trapped in the impeller (120) and suction pipe.
5. Close the vent valve and then the outside supply line.

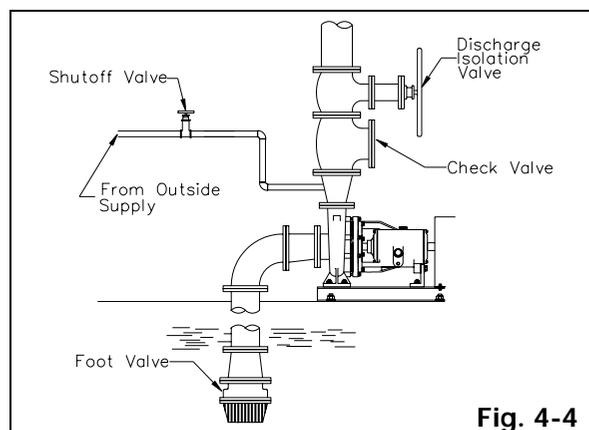

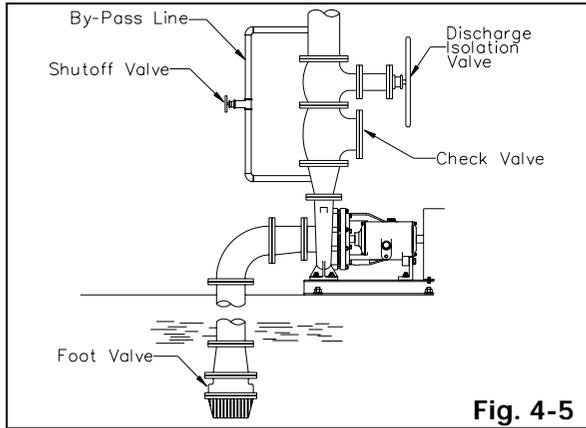


Fig. 4-5

4.2 Starting Pump

(i) NOTE

When pump is handling heavy viscous liquid, the viscosity of the liquid must allow it to be pumped easily. Liquid may have to be heated prior to starting the pump.

1. Make sure suction valve is open.
2. Fully close or partially open discharge valve as dictated by system conditions.
3. Start the driver. Bring pump up to speed quickly so internal parts receive lubrication.

(!) CAUTION

Immediately observe pressure gauges. If discharge pressure is not quickly attained, stop driver, reprime and attempt to restart.

4. As soon as the pump is up to rated speed, open the discharge valve slowly until the desired flow is obtained to avoid abrupt changes in velocity and surging in the suction line.

(! W) WARNING

Do not operate pump below minimum rated flows or with suction and/or discharge valve closed. These conditions may create an explosive hazard due to vaporisation of pumpage and can quickly lead to pump failure and physical injury.

5. With pumps that are gland packed it is important to keep the gland (213) as loose as possible without undue leakage, for packing lubrication. A normal leakage rate is between 20 to 30 drops/minute. A tight gland will cause excessive packing and shaft sleeve wear, and also increase power consumption.
6. After the unit has operated for a short time, all pressure bolting should be gone over for tightness.

4.3 Operation

4.3.1 General Considerations

If conditions required operating the pump at reduced capacity, always vary capacity with regulating valve in the discharge line. NEVER throttle flow from the suction side.

(!) CAUTION

When operating for some time at reduced capacity, much of the pump horsepower will go into the liquid in the form of heat. A bypass must be provided under these conditions to prevent the liquid in the pump from becoming hot enough to vaporise.

Driver may overload if the pumpage specific gravity (density) is greater than originally assumed, or the rated flow rate is exceeded.

Always operate the pump at or near the rated conditions to prevent damage resulting from cavitation or recirculation.

Damage to the pump may occur if operating at reduced capacity due to:

- **Increase Vibration Levels** – Affects bearings, stuffing box cover, and mechanical seal.
- **Increase Radial Thrusts** – Stresses on shaft and bearings.
- **Heat Build Up** – Vaporisation causing rotating parts to score or seize.
- **Cavitation** – Damage to internal surfaces of pump.

- **Erosive Swirl** – Liquid recirculates through the pump causing localised damage by erosive action.

4.3.2 Operation Checks

1. Make certain that liquid is always being discharged from the pump. If not, the pump may seize. A discharge pressure gauge is the best method to check whether or not liquid is being pumped. If the gauge drops to zero or registers abnormal pressure, shut down the pump immediately and determine the cause.
2. For pump which is equipped with mechanical seal (200), leakage usually indicates that the seal has been damaged or wrong fitted. If excessive leakage occurs, shut down the pump immediately and determine the problem of the seal. Refer to section 6 *Disassembly & Reassembly* for dismantling and installing the mechanical seal (200).
3. For gland packed pump, a slight amount of leakage through the packing (201) is required to cool and lubricate the packing. If insufficient or excessive leakage occurs, adjustment of the gland (213) has to be done per instructions in section 5.4.2 *Gland Packing*.
4. Bearings (310 for KS-SR or 311 and 312 for KS-SG) will run at a constant temperature, depending on the air temperature at the location (normal operating temperature will be 60°C to 85°C based on 27°C ambient temperature). Frequently check the oil level through the oil gauge (331). If bearing temperature exceeds 95°C, the pump should be shut down and the cause of the overheating located.
5. Observe pump for vibration levels, and excessive noise. If normal levels are exceeded, shut down and resolve.

4.3.3 Operation Troubleshooting

If any of the following troubles are encountered, they may be due to the causes listed below:

No Liquid Delivered

1. *Pump not primed* – Reprime pump, check that the pump and suction line are full of liquid.
2. *Speed too low* – Check voltage and frequency.
3. *Air leak in suction or stuffing box cover* – Repair leak or readjust packing (201) or mechanical seal (200).
4. *Discharge head too high* – Consult factory, reduce flow rate or shorten discharge pipe.
5. *Suction lift too high* – Shorten suction pipe.
6. *Impeller or discharge line plugged up* – Back flush pump to clean impeller (120) or remove obstruction from discharge pipe.
7. *Wrong direction of rotation* – Change rotation to concur with direction indicated by arrow labelled either on bearing bracket (301), adaptor extension ring (221) or frame adaptor (220).
8. *Discharge valve closed* – Slowly open discharge valve until the desired flow is obtained.
9. *Foot valve or suction pipe opening not submerged enough* – Consult factory for proper depth. Use baffle to eliminate vertices.

Not Enough Liquid Delivered

1. *Air leaks in suction or stuffing box cover* – Repair leak or readjust packing (201) or mechanical seal (200).
2. *Air leaks through gasket* – Replace stuffing box cover gasket (431).
3. *Speed too low* – Check voltage and frequency.
4. *Suction lift too high* – Shorten suction pipe.
5. *Impeller or discharge line partially plugged* – Back flush pump to clean impeller (120)

or remove obstruction from discharge pipe.

6. *Not enough suction head for hot liquid* – Ensure that suction line valve is fully open and line is unobstructed.
7. *Total head too high* – Consult factory or shorten suction and discharge pipe.
8. *Excessive impeller running clearance* – Adjust impeller clearance.
9. *Damaged impeller or casing* – Inspect and replace if necessary.
10. *Foot valve or suction pipe opening not submerged enough* – Consult factory for proper depth. Use baffle to eliminate vertices.
11. *Wrong direction of rotation* – Change rotation to concur with direction indicated by arrow labelled either on bearing bracket (301), adaptor extension ring (221) or frame adaptor (220).

Not Enough Pressure

1. *Speed too low* – Check voltage and frequency.
2. *Wrong direction of rotation* – Change rotation to concur with direction indicated by arrow labelled either on bearing bracket (301), adaptor extension ring (221) or frame adaptor (220).
3. *Air or gas in liquid* – Rearrange piping to eliminate air or gas in liquid.
4. *Leaks in suction* – Repair leak.
5. *Excessive impeller running clearance* – Adjust impeller clearance.
6. *Impeller diameter too small* – Consult factory or increase driver speed if allowable.
7. *Damaged impeller or casing* – Inspect and replace if necessary.
8. *Impeller partially clogged* – Back flush pump to clean impeller (120).

Pump Works for a While, Then Loses Suction

1. *Air leaks in suction or stuffing box cover* – Repair leak or readjust packing (201) or mechanical seal (200).
2. *Suction lift too high* – Shorten suction pipe.
3. *Air or vapour pockets in suction line* – Rearrange piping to eliminate air pockets.
4. *Improperly primed pump* – Reprime pump.

Motor Runs Hot

1. *Speed too high* – Check voltage and frequency.
2. *Head lower than rating allowing pump to handle too much liquid* – Consult factory, install throttle valve or trim impeller (120).
3. *Liquid heavier and more viscous than rating* – Check specific gravity and viscosity.
4. *Excessive impeller running clearance* – Adjust impeller clearance.
5. *Packing too tight* – Readjust packing (201), replace if worn.
6. *Rotor binding* – Check internal wearing parts for proper clearances.
7. *Defects in motor* – Consult driver manufacturer.

Pump Is Noisy and Vibrates

1. *Air or gas in liquid* – Rearrange piping to eliminate air or gas in liquid.
2. *Pump is cavitating* – Locate and correct system problem.
3. *Foot valve or suction pipe opening not submerged enough* – Consult factory for proper depth. Use baffle to eliminate vertices.
4. *Improper pump-driver alignment* – Align shafts.

5. *Worn or loose bearings* – Replace as required.
6. *Partly clogged impeller causing imbalance* – Back flush pump to clean impeller (120).
7. *Broken or bent impeller or shaft* – Replace as required.
8. *Foundation not rigid* – Tighten hold down bolts of pump and driver.
9. *Suction or discharge piping not anchored or properly supported* – Anchor per Hydraulic Institute Standards Manual recommendations.

Stuffing Box Cover Overheat

1. *Packing too tight* – Readjust packing (201), replace if worn.
2. *Packing not sufficiently lubricated* – Readjust packing (201), replace if worn.
3. *Wrong grade of packing* – Consult factory.
4. *Packing not properly packed* – Check and repack packing (201).

Excessive Leakage from Stuffing Box Cover

1. *Gland improperly adjusted* – Tighten gland nuts.
2. *Packing not properly packed* – Check and repack packing (201).
3. *Worn mechanical seal parts* – Replace worn parts.
4. *Shaft or shaft sleeve scored* – Remachine or replace as required.

Bearings Overheat

1. *Oil level too low* – Add more lubricant until proper level is reached.
2. *Improper or poor grade of oil* – Check lubricant for suitability.
3. *Dirt or water in bearings* – Clean the bearing bracket (301) or bearing frame (300) and add in proper lubricant.

4. *Improper alignment* – Realign pump and driver.

Bearings Wear Rapidly

1. *Improper alignment* – Realign pump and driver.
2. *Shaft bent* – Replace as required.
3. *Vibration* – Locate and correct problem.
4. *Lack of lubrication* – Add more lubricant until proper level is reached.
5. *Bearings improperly installed* – Reinstall bearings (310 for KS-SR or 311 and 312 for KS-SG).
6. *Improper or poor grade of oil* – Check lubricant for suitability.
7. *Dirt or water in bearings* – Clean the bearing bracket (301) or bearing frame (300) and add in proper lubricant.

4.4 Shutdown

1. Whenever possible, the pump should be allowed to operate on water only for a short period to clean any slurry through the system before shutdown.
2. If a check valve is installed in the discharge line, the pump may be shut down by merely stopping the driver. If a check valve is not installed, shut down the pump by slowly closing the discharge valve, after which the driver is to be stopped immediately.
3. Lock driver to prevent accidental rotation.
4. It is good practice to close the suction valve if the pump is to be shut down for an extended period of time.
5. When the pump is idle and there is a possibility of freezing, the pump casing drain plug (401) should be removed and the casing drained.
6. If pumps are on hot service and are put on standby, keep cooling liquid on.

**WARNING**

When handling hazardous and/or toxic fluids, proper personal protective equipment should be worn. If pump is being drained, precautions must be taken to prevent physical injury. Pumpage must be handled and disposed of in conformance with applicable environmental regulations.

2. Check alignment while unit is still hot per alignment procedures in section 3.6.3 *Alignment Procedures for Direct Coupled Baseplate Design* or 3.6.4 *Alignment Procedures for V-Belt Driven Baseplate Design*.
3. Reinstall coupling or driving belts guard.

4.5 Final Alignment

1. Run the unit under actual operating conditions for a sufficient length of time to bring the pump and driver up to operating temperature.

5 PREVENTIVE MAINTENANCE

5.1	General Comments	-----	27
5.2	Maintenance Schedule	-----	27
5.3	Maintenance of Bearings	-----	28
5.4	Maintenance of Shaft Seals	-----	28
	5.4.1 Mechanical Sealing	-----	28
	5.4.2 Gland Packing	-----	28

5.1 General Comments

Kewpumps are ruggedly constructed, and with proper care will give years of satisfactory service.

A routine maintenance program can extend the life of your pump. Well maintained equipment will last longer and required fewer repairs. You should keep maintenance records, this will help pinpoint potential causes of problems.

Kewpump (M) Sdn. Bhd. assumes no responsibility or liability for damages caused by the use and failure of the pump which has been fitted with spare or repair parts not of Kewpump (M) Sdn. Bhd. manufacture. Only genuine parts from Kewpump (M) Sdn. Bhd. or an authorised distributor should be used.



WARNING

Do not attempt any maintenance, inspection, repair or cleaning in the vicinity of operating rotating equipment. Such action could result in injury to operating personnel.

Before attempting any inspection or repair on the pump, the driver control must be in the "off" position, locked and tagged to prevent injury to personnel performing service on the pump.

5.2 Maintenance Schedule

Routine Maintenance

1. Bearing lubrication
2. Seal monitoring
3. Vibration analysis
4. Discharge pressure
5. Temperature monitoring

Routine Inspections

1. Check level and condition of oil through oil gauge (331) on bearing bracket (301) or bearing frame (300).
2. Check for unusual noise, vibration and bearings temperature.
3. Inspect pump and piping for leaks.
4. Check stuffing box cover (212) for leaks.
 - *Mechanical Sealing* – Should be no leakage.
 - *Gland Packing* – Insufficient or excessive leakage requires adjustment or possible packing (201) replacement. Refer to section 5.4.2 *Gland Packing* for adjustment.

3 Months Inspections

1. Check the foundation and the hold-down bolts for tightness.
2. If the pump has been left idle, check the packing (201). Replace if require.
3. Oil should be changed at least every 3 months (2000 hours) or more often if there are any adverse atmospheric conditions or other conditions which might contaminate or break down the oil. If it is cloudy or contaminated as seen by inspection through the oil gauge (331), it should be changed immediately.
4. Check the coupling alignment. Realign if required.

Annual Inspections

1. Check the pump capacity, pressure and power. If pump performance does not satisfy your process requirements, and the process requirements have not changed, the pump should be disassembled, and all internal parts and passages be cleaned and inspected for wear. Foreign matter found in pump should be removed, and worn parts should be replaced. Otherwise, a system inspection should be done.

5.3 Maintenance of Bearings

1. Check the oil level and condition periodically to be sure there is an adequate supply of oil.
2. Change the oil after 200 hours for new bearings, thereafter every 2000 operating hours or 3 months (whichever comes first), or sooner if the operating conditions or pump environment dictates.
3. Before filling with new oil, flush the bearing bracket (301) or bearing frame (300) with hot, light oil, rotating the pump shaft (130) by hand to remove dirt and contaminants.
4. Refer to previous section *4.1.3 Lubricating Bearings* for proper procedures of refilling the bearing bracket (301) or bearing frame (300). High quality turbine oil

which is non-detergent, and has anti-rust and anti-oxidant additive should be used. The grade of oil should be ISO viscosity grade 100 (between SAE grade 30 and 40).

5.4 Maintenance of Shaft Seals

5.4.1 Mechanical Sealing

The life of a mechanical seal depends on various factors such as cleanliness of the liquid handled and its lubricating properties. Due to the diversity of operating conditions it is, however, not possible to give definite indications as to its life.



WARNING

Never operate the pump without liquid supplied to mechanical seal. Running a mechanical seal dry, even for a few seconds, can cause seal damage and must be avoided. Physical injury can occur if mechanical seal fails.

1. Mechanical seal (200) should be checked, particularly during the first hours of operation. Minor leakage through the seal usually stops after a short time. However, if it continues, stop the pump and examine the seal. Excessive leakage past a mechanical seal (200) usually indicates worn or broken parts, which require replacement.
2. Replace the mechanical seal (200) as per instructions in section *6 Disassembly & Reassembly*. The same type of seal should be used for replacement and the instructions should be followed closely.

5.4.2 Gland Packing

1. Check the gland leakage periodically to be sure the leakage rate is acceptable. A normal leakage rate is between 20 to 30 drops/minute.
2. If the leakage is excessive, after the pump has been running for 10 minutes with steady leakage, tighten the two (2) gland nuts evenly by one sixth of a full turn at 10 minutes interval until the leakage is acceptable, ensuring overheating does not occur.

3. If the stuffing box cover (212) is overheated, the pump must be stopped and allowed to cool and when restarted, leakage should take place. If it does not, step 2 should be repeated.
4. If leakage is insufficient and shows sign of heating when the stuffing box cover (212) is pressurised, try to loosen the two (2) gland nuts evenly until adequate leakage rate is reached.
5. When packing (201) becomes worn to the extent that leakage cannot be controlled and heating persists, it is advisable to repack the pump as per instructions in section 6 *Disassembly & Reassembly*.

i NOTE

It is normal for gland leakage water to be hotter than the supply because it is conducting away the heat generated by friction in the gland.

At low pressure, very little leakage is required and it is possible to operate with only a small amount of water issuing from the gland. It is not essential to stop a pump because of gland heating unless steam or smoke is produced.

This Page Intentionally Left Blank

6 DISASSEMBLY & REASSEMBLY

6.1	Disassembly	32
6.1.1	Removal of Pump from Base Plate	32
6.1.2	Removal of Impeller	33
6.1.3	Removal of Stuffing Box Cover for All Types Except KS-SR Model with Discharge Diameters 125 and 150mm	34
6.1.4	Removal of Stuffing Box Cover for KS-SR Model with Discharge Diameters 125 and 150mm	35
6.1.5	Removal of Adaptor Extension Ring	37
6.1.6	Removal of Frame Adaptor for KS-SG	37
6.1.7	Disassembly of Power End and Bearing Bracket/Frame	37
6.2	Inspections	38
6.2.1	Casing	38
6.2.2	Impeller	38
6.2.3	Stuffing Box Cover	38
6.2.4	Frame Adaptor for KS-SG	39
6.2.5	Shaft and Shaft Sleeve	39
6.2.6	Bearing Bracket/Frame and Support Foot	39
6.2.7	Bearings	39
6.2.8	Seal Cover, Gland, End Ring, Seals, Gaskets and "O" Rings	39
6.3	Reassembly	40
6.3.1	Assembly of Power End and Bearing Bracket/Frame	40
6.3.2	Reinstallation of Frame Adaptor for KS-SG	42
6.3.3	Reinstallation of Adaptor Extension Ring	43
6.3.4	Reinstallation of Shaft Sealing into Stuffing Box Cover or Seal Cover	43
6.3.5	Reinstallation of Stuffing Box Cover for All Types Except KS-SR Model with Discharge Diameters 125 and 150mm	44
6.3.6	Reinstallation of Stuffing Box Cover for KS-SR Model with Discharge Diameters 125 and 150mm	46
6.3.7	Reinstallation of Impeller	48
6.3.8	Reinstallation of Pump to Base Plate	48
6.3.9	Post Assembly Checks	49
6.3.10	Assembly Troubleshooting	49

6.1 Disassembly

WARNING

Pump components can be heavy. Proper methods of lifting must be employed to avoid physical injury and/or equipment damage. Steel toed shoes must be worn at all times.

WARNING

The pump may handle hazardous and/or toxic fluids. Proper personal protective equipment should be worn. Precautions must be taken to prevent physical injury. Pumpage must be handled and disposed of in conformance with applicable environmental regulations.

NOTE

Before disassembling the pump for overhaul, ensure all replacement parts are available.

WARNING

Lock out power supply to driver to prevent accidental startup and physical injury.

6.1.1 Removal of Pump from Base Plate

1. Shut off all valves controlling flow to and from pump.

WARNING

Operator must be aware of pumpage and safety precautions to prevent physical injury.

2. Drain liquid from piping, flush pump if necessary.
3. Disconnect all auxiliary piping and tubing.
4. Remove coupling or driving belts guard.
5. Disconnect couplings or pulleys.
6. If rubber bushing coupling is used, remove driver foot hold down bolts and nuts and move driver backward away from the pump.

7. Drain oil from bearing bracket (301) or bearing frame (300) by removing bearing bracket/frame drain plug (400). Replace plug after oil is drained (Fig. 6-1).

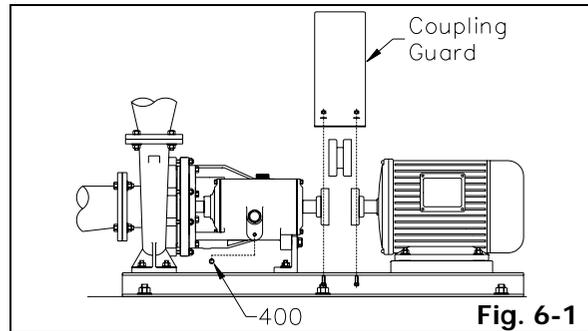


Fig. 6-1

NOTE

Oil analysis should be part of a preventive maintenance program and is helpful to determine cause of a failure. Save oil in a clean container for inspection.

8. Place sling from hoist through bearing bracket (301) or frame adaptor (220).
9. Remove support foot (410) hold down bolts and nuts.
10. Remove casing nuts (Fig. 6-2).

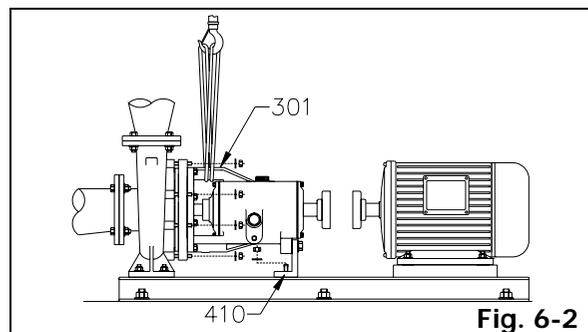


Fig. 6-2

WARNING

Never apply heat to remove parts. Use of heat may cause an explosion due to trapped fluid, resulting in severe physical injury and property damage.

11. Jack out the back pull-out assembly from casing (100). Make sure stuffing box cover gasket (431) is not damaged (Fig. 6-3).

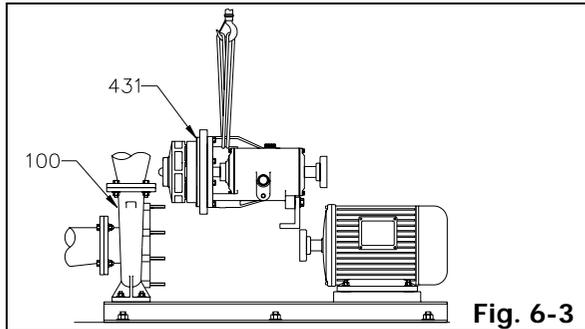


Fig. 6-3

(i) NOTE

Stuffing box cover gasket may partially adhere to casing due to binders and adhesives in gasket material. Remove carefully to make sure gasket is not damaged.

(i) NOTE

Penetrating oil can be used if stuffing box cover to casing joint is excessively corroded.

(i) NOTE

Remove and then mark shims (if used) under bearing bracket/frame support foot. Save for reassembly.

(⚠) WARNING

Never remove the back pull-out assembly unassisted, physical injury can occur.

12. Move back pull-out assembly to clean workbench.

13. Support bearing bracket (301) or frame adaptor (220) securely to workbench. Jack out coupling or pulley (Fig. 6-4).

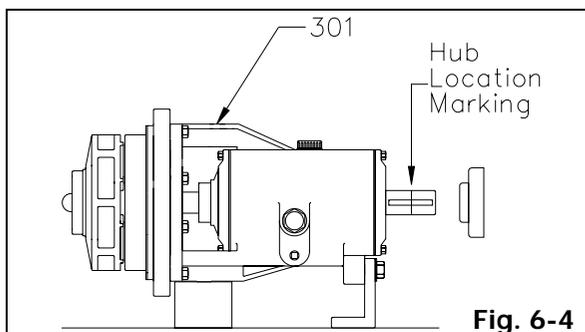


Fig. 6-4

(⚠) CAUTION

Coupling or pulley must not be hammered off the shaft, since this will damage the bearings of the pump.

(i) NOTE

Mark and scribe shaft for relocating coupling/pulley hub during reassembly.

6.1.2 Removal of Impeller

(⚠) WARNING

Never apply heat to remove an impeller. The use of heat may cause an explosion due to trapped fluid, resulting in severe physical injury property damage.

(⚠) WARNING

Wear heavy work gloves when handling impellers as sharp edges may cause physical injury.

(i) NOTE

It is recommended that the bearing bracket/frame support foot be clamped to the workbench when removing the impeller.

1. Slide spanner over the shaft (130) and shaft end key (136). Hold the spanner on the workbench or a solid block and make sure the power end is secure on the work surface.
2. Place another spanner over the impeller nut (134) and unscrew the nut counterclockwise (viewed from the impeller end of the shaft). Remove impeller nut (134) and lift off impeller (120) (Fig. 6-5).


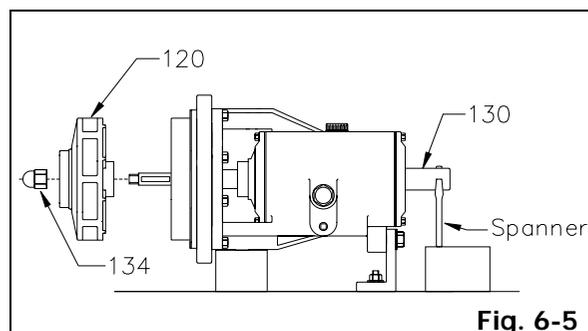


Fig. 6-5

- Lift out key for impeller (135) from shaft (130) (Fig. 6-6).

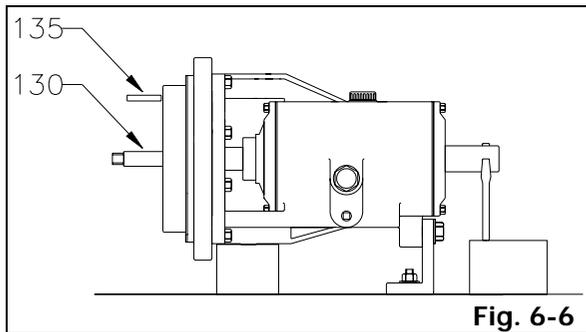


i NOTE

If the impeller cannot be removed from the shaft, remove gland from stuffing box cover (for gland packing), cut the shaft after the stuffing box cover or sleeve (for gland packing and type KS-SG), remove impeller, stuffing box cover, sleeve and shaft end as a unit. Do not use heat.



6.1.3 Removal of Stuffing Box Cover for All Types Except KS-SR Model with Discharge Diameters 125 and 150mm

Mechanical Sealing


- For KS-SR, remove shaft sleeve (133), followed by the rotary portion of mechanical seal (200) from shaft (130) (Fig. 6-7).

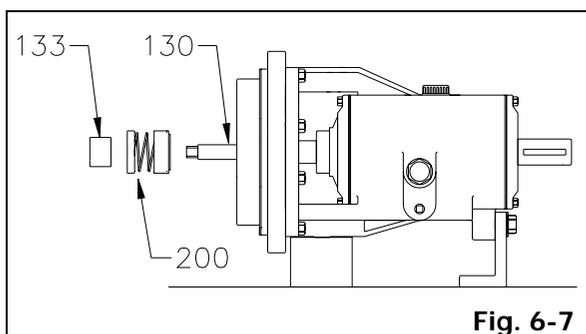

- For KS-SG, remove shaft sleeve gasket (437), followed by shaft sleeve (133) and rotary portion of mechanical seal (200) as a unit from shaft (130) (Fig. 6-8).
- Remove rotary portion of mechanical seal (200) from shaft sleeve (133) (Fig. 6-9).

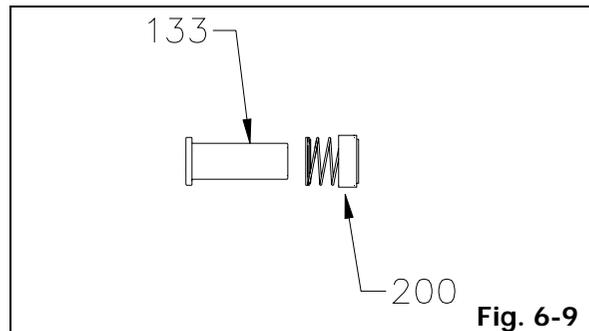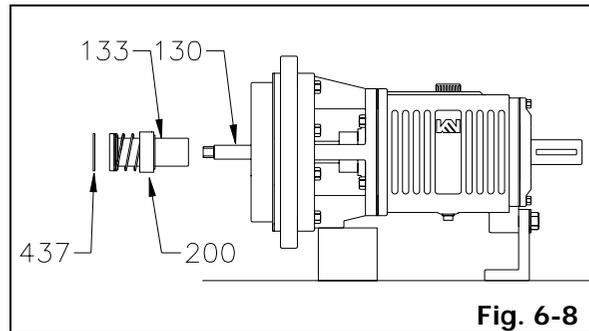

- Remove stuffing box cover (212) from bearing bracket (301), adaptor extension ring (221) or frame adaptor (220) (Fig. 6-10).

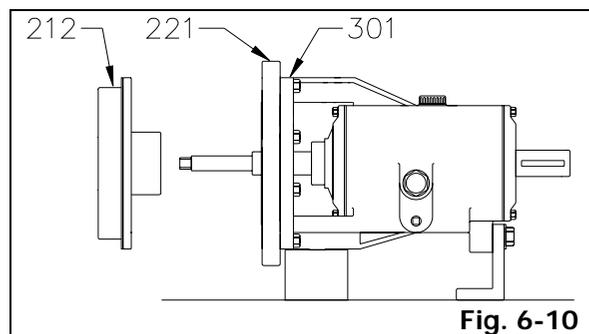

! CAUTION

Be careful not to damage the stationary portion of mechanical seal seated on stuffing box cover while removing stuffing box cover from bearing bracket, adaptor extension ring or frame adaptor.

- Remove stuffing box cover gasket (431) from stuffing box cover (212).

i NOTE

Stuffing box cover gasket may partially adhere to stuffing box cover due to binders and adhesives in gasket material. Remove carefully to make sure gasket is not damaged.

- Remove stationary portion of mechanical seal (200) gently from stuffing box cover (212) (Fig 6-11).

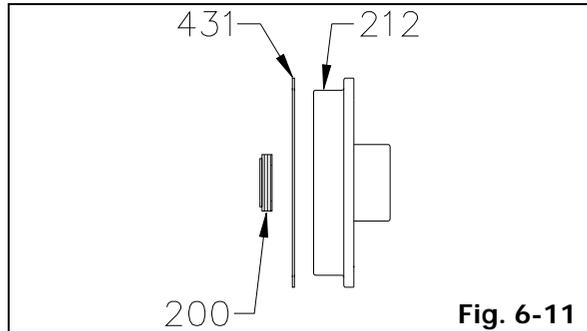


Fig. 6-11

Gland Packing

- Remove two (2) gland nuts.
- Remove gland (213) from stuffing box cover (212) (Fig. 6-12).

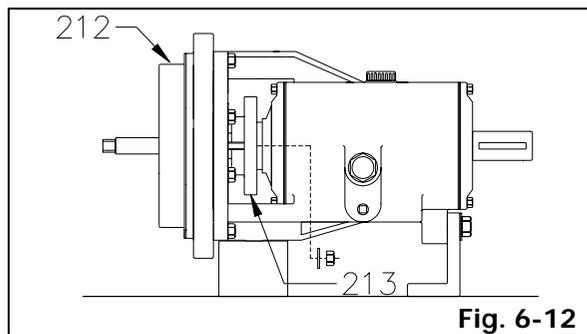


Fig. 6-12

- Remove stuffing box cover (212) and end ring (214) as a unit from bearing bracket (301) or adaptor extension ring (221).
- Remove shaft sleeve (133), shaft sleeve "O" ring (423) and gland (213) from shaft (130) (Fig. 6-13).

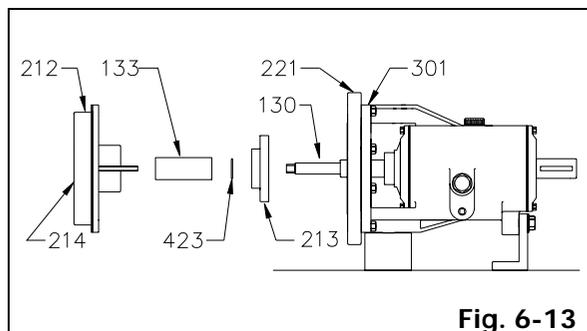


Fig. 6-13

- Remove stuffing box cover gasket (431) from stuffing box cover (212).

i NOTE

Stuffing box cover gasket may partially adhere to stuffing box cover due to binders and adhesives in gasket material. Remove carefully to make sure gasket is not damaged.

- Remove packing (201) from stuffing box cover (212) (Fig 6-14).

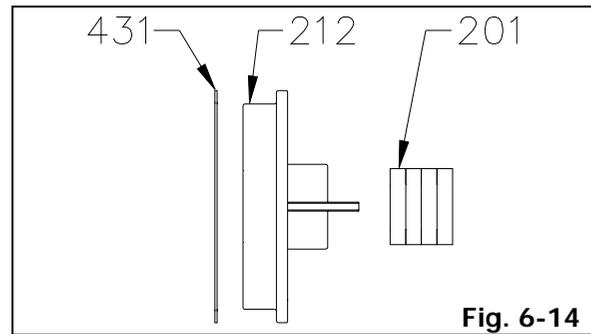


Fig. 6-14

- Remove three (3) end ring bolts and lift off end ring (214) from stuffing box cover (212).
- Remove two (2) stuffing box cover studs from stuffing box cover (212) (Fig. 6-15).

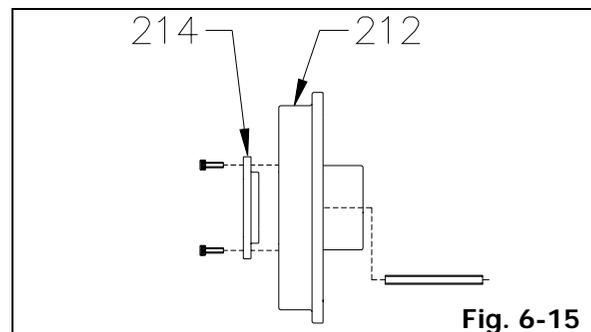


Fig. 6-15

6.1.4 Removal of Stuffing Box Cover for KS-SR Model with Discharge Diameters 125 and 150mm

Mechanical Sealing

- Remove shaft sleeve (133) from shaft (130).
- Remove eight (8) stuffing box cover bolts and lift off stuffing box cover (212) and seal cover (215) as a unit from bearing bracket (301) (Fig. 6-16).

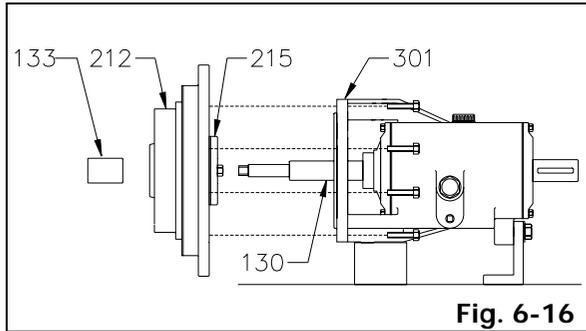


Fig. 6-16

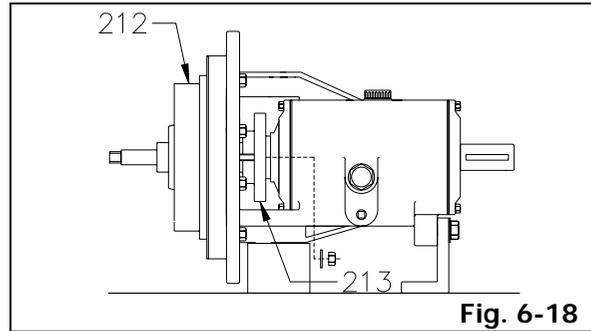


Fig. 6-18

CAUTION
Be careful not to damage the mechanical seal seated between stuffing box cover and seal cover while removing stuffing box cover from bearing bracket.

3. Remove stuffing box cover gasket (431) from stuffing box cover (212).

NOTE
Stuffing box cover gasket may partially adhere to stuffing box cover due to binders and adhesives in gasket material. Remove carefully to make sure gasket is not damaged.

4. Remove two (2) seal cover bolts, lift off seal cover (215) from stuffing box cover (212), and remove rotary portion of mechanical seal (200) from stuffing box cover (212).
5. Remove seal cover gasket (438) and stationary portion of mechanical seal (200) gently from seal cover (215) (Fig. 6-17).

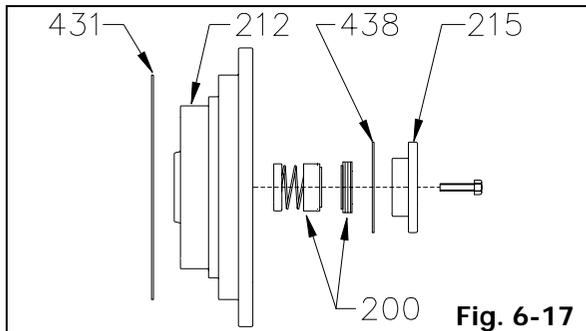


Fig. 6-17

Gland Packing

1. Remove two (2) gland nuts.
2. Remove gland (213) from stuffing box cover (212) (Fig. 6-18).

3. Remove eight (8) stuffing box cover bolts and lift off stuffing box cover (212) from bearing bracket (301).
4. Remove shaft sleeve (133), shaft sleeve "O" ring (423) and gland (213) from shaft (130) (Fig. 6-19).

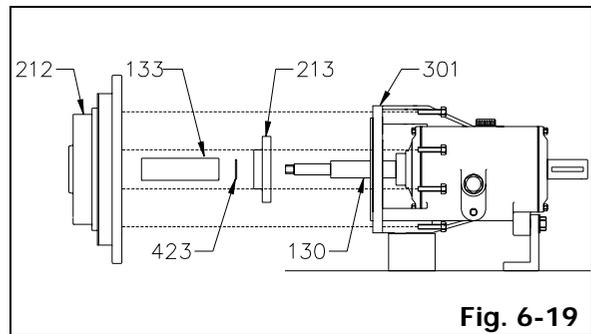


Fig. 6-19

5. Remove stuffing box cover gasket (431) from stuffing box cover (212).

NOTE
Stuffing box cover gasket may partially adhere to stuffing box cover due to binders and adhesives in gasket material. Remove carefully to make sure gasket is not damaged.

6. Remove packing (201) from stuffing box cover (212).
7. Remove two (2) stuffing box cover studs from stuffing box cover (212) (Fig. 6-20).

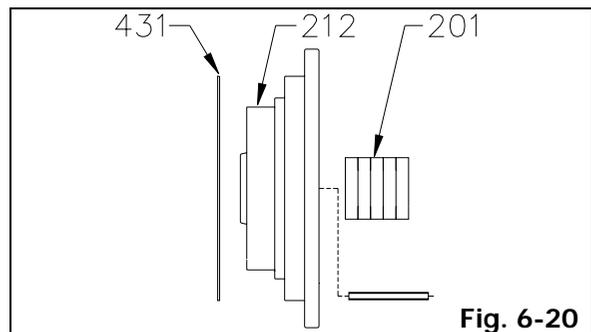


Fig. 6-20

6.1.5 Removal of Adaptor Extension Ring

1. For pumps furnished with adaptor extension ring (221), remove eight (8) or twelve (12) adaptor extension ring bolts and lift off adaptor extension ring (221) from bearing bracket (301) or bearing frame (300) (Fig. 6-21).

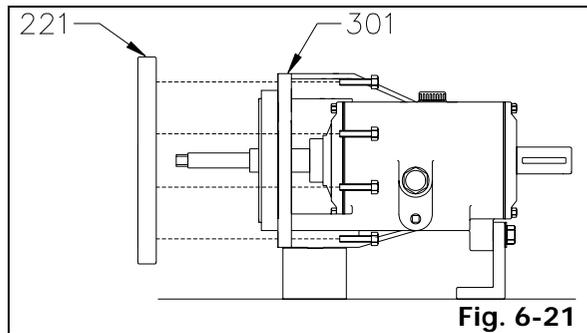


Fig. 6-21

6.1.6 Removal of Frame Adaptor for KS-SG

1. Support bearing frame (300) securely to workbench. Remove four (4) frame adaptor bolts.
2. Remove frame adaptor (220) together with deflector (440) from shaft (130).
3. Remove oil seal (321) from frame adaptor (220).
4. Remove and discard frame adapter gasket (434). Replace new gasket during reassembly (Fig. 6-22).

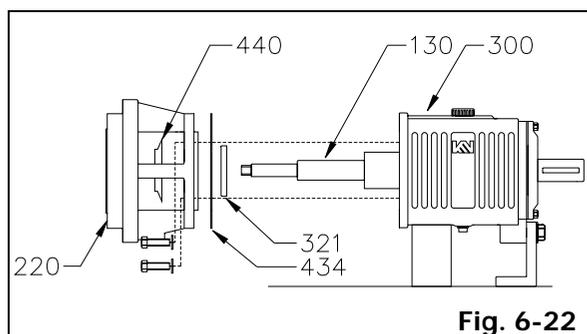


Fig. 6-22

6.1.7 Disassembly of Power End and Bearing Bracket/Frame

1. Lift out shaft end key (136) from shaft (130).
2. For KS-SR, remove deflector (440) from shaft (130).

3. Remove eight (8) (for KS-SR) or four (4) (for KS-SG) bearing cover bolts.
4. Remove bearing cover(s) (320) from bearing bracket (301) or bearing frame (300).
5. Remove oil seal(s) (321) from bearing cover(s) (320).
6. Remove and discard bearing cover gasket(s) (430). Replace new gasket(s) during reassembly (Fig. 6-23 and 6-24).

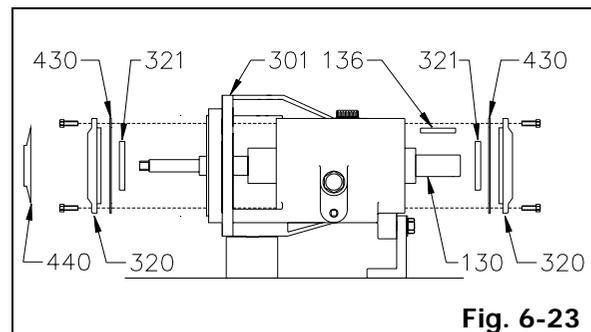


Fig. 6-23

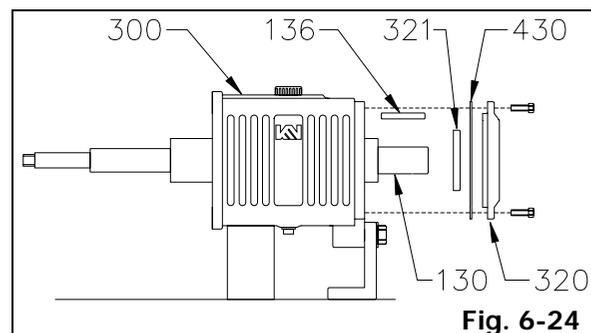


Fig. 6-24

7. Remove shaft (130) with bearings (310 for KS-SR or 311 and 312 for KS-SG) from bearing bracket (301) or bearing frame (300) by tapping with a piece of tubing placed against the inner race of pump end bearing (310 for KS-SR or 311 for KS-SG).
8. Jack off bearings (310 for KS-SR or 311 and 312 for KS-SG) from shaft (130) (Fig. 6-25).

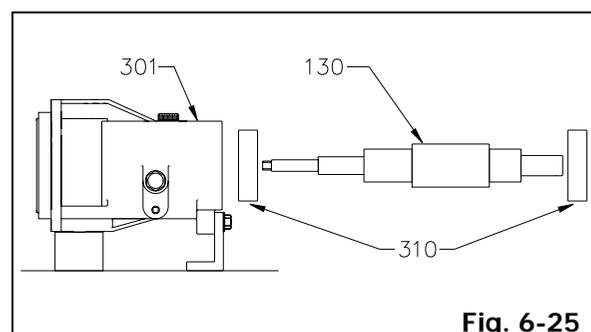


Fig. 6-25

i NOTE

When pressing bearings off shaft, use force on inner race only.

i NOTE

Save bearings for inspection.

9. Remove oil cover (330), oil gauge (331), and bearing bracket/frame drain plug (400) from bearing bracket (301) or bearing frame (300).
10. Remove support foot (410) from bearing bracket (301) or bearing frame (300) (Fig. 6-26 and 6-27).

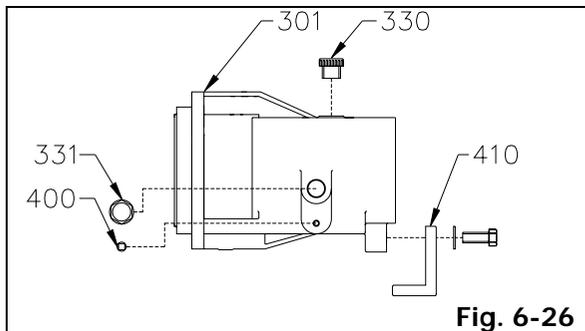


Fig. 6-26

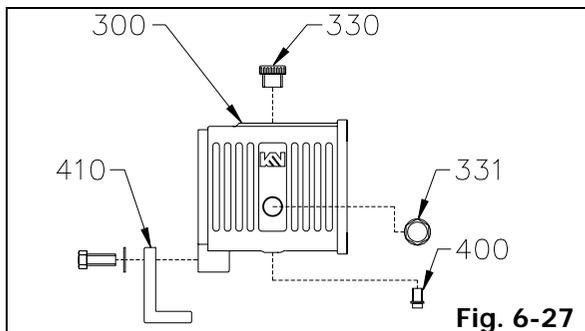


Fig. 6-27

6.2 Inspections

The pump parts must be inspected before they are reassembled to insure the pump will run properly. Any part that is damaged and cannot be repaired should be replaced.

Kewpump (M) Sdn. Bhd. assumes no responsibility or liability for damages caused by the use and failure of the pump which has been fitted with spare or repair parts not of Kewpump (M) Sdn. Bhd. manufacture. Only genuine parts from Kewpump (M) Sdn. Bhd. or an authorised distributor should be used.

All parts must be clean before reassembly. This is especially important at "O" ring grooves, threads, radial fit contact areas, and gasket surface.

i NOTE

Clean parts in solvent to remove oil, grease or dirt, dry with compressed air or lint free cloths. Protect machined surfaces against damage during cleaning.

6.2.1 Casing

1. Inspect casing (100) thoroughly, remove all burrs and foreign matter.
2. Check hydraulic passages for cleanliness.
3. Inspect gasket seat surface for irregularities and cleanliness.
4. Inspect for cracks and excessive wear or pitting. It should be repaired or replaced if any of these conditions exist.

6.2.2 Impeller

1. Inspect impeller (120) vanes, back vanes and ribs for cracks, wear, erosion, corrosion, pitting, burrs, or scoring. Large nicks and deep pitting will unbalance the impeller (120) and may cause vibration and excessive wear on other parts of the pump. Replace impeller (120) as required.
2. Check and clean the impeller (120) bore.

6.2.3 Stuffing Box Cover

1. Inspect gasket seat surface for cleanliness and irregularities.
2. Inspect stuffing box cover (212) surface for wear, erosion, corrosion, pitting, burrs, or scoring. Replace as required.
3. Stuffing box cover (212) bore must be inspected and thoroughly cleaned. Make certain that there are no deep scratches. Replace as required.

6.2.4 Frame Adaptor for KS-SG

1. Check frame adaptor (220) for cracks or excessive corrosion damage. Replace if any of these conditions exist.
2. Make sure gasket seat surface is clean.

6.2.5 Shaft and Shaft Sleeve

Shaft

1. Check shaft (130) for straightness (on rollers positioned at bearing diameters). Shaft (130) run out should be no more than 0.025mm. Replace shaft if run out exceeds this value.
2. Check that surfaces are free from scores, wear, corrosion, grooves and pitting. The shoulder against shaft sleeve (133) should be carefully check. Replace as required.
3. Keyways on both ends of the shaft should be undamaged, key for impeller (135) and shaft end key (136) should fit snugly.

Shaft Sleeve

1. Check surface of shaft sleeve (133) for scoring, grooves, pitting and scratches. Replace as required.
2. Make certain that the sleeve end is clean where the impeller (120) and shaft sleeve "O" ring (423) (if used) are located.

6.2.6 Bearing Bracket/Frame and Support Foot

1. Visually inspect bearing bracket (301) or bearing frame (300) and support foot (410) for cracks. Check bracket/frame inside surfaces for rust, scale or debris. Remove all loose and foreign material.
2. Make sure all lubrication passages are clear, and gasket seat surfaces must be clean.
3. If bracket/frame has been exposed to pumpage, inspect for corrosion or pitting.
4. Inspect inboard bearing bore. Replace bearing bracket (301) or bearing frame (300) as required.

6.2.7 Bearings

1. Clean bearings with petroleum solvent (not paraffin) to remove all sludge and deposits, follow by light lubricating oil to remove solvent and protect them for moisture and dust.
2. Ball bearings (310 for KS-SR or 311 and 312 for KS-SG) should be inspected for contamination and damage. The condition of the bearings will provide useful information on operating conditions in the bearing bracket (301) or bearing frame (300). Lubricant condition and residue should be noted, oil analysis is often helpful. Bearing damage should be investigated to determine cause and replace bearings. If cause is not normal wear, it should be corrected before pump is returned to service.

6.2.8 Seal Cover, Gland, End Ring, Seals, Gaskets and "O" Rings

Seal Cover (Mechanical Sealing for KS-SR Model with Discharge Diameters 125 and 150mm)

1. Make certain that the seat surface for stationary portion of mechanical seal (200) is clean and smooth.
2. Check that surfaces are free from scores, wear and corrosion. Replace as required.

Gland and End Ring (Gland Packing)

1. Inspect surface of gland (213) and End Ring (214) that contacts packing (201) to be sure that it is clean and smooth.
2. Check that surfaces are free from scores, wear and corrosion. Replace as required.

Mechanical Seal (Mechanical Sealing)



CAUTION

The mechanical seal faces must be handle with care, ensuring clean and free from scratches, otherwise they are unfit for use.

1. Clean sliding faces on both rotary and stationary portions of mechanical seal

(200) to be sure that those faces are in a completely dry, dust free and clean state.

2. Inspect seal faces for cracks, wear, scoring and scratches. Replace mechanical seal (200) as required.
3. Inspect secondary seal components (bellow, rubber cap, etc.) and other parts (spring, spring cap, etc.) for damage. Replace mechanical seal (200) as required.

Packing (Gland Packing), Gaskets and "O" Rings



1. Discard all packing (201), bearing cover gaskets (430), frame adaptor gasket (434) and seal cover gasket (438) since new parts are recommended for reassembly.
2. Inspect stuffing box cover gasket (431), shaft sleeve gasket (437) (for KS-SG) and shaft sleeve "O" ring (423) (if used) for cuts, cracks and elasticity. Replace as required.

6.3 Reassembly




6.3.1 Assembly of Power End and Bearing Bracket/Frame

***i* NOTE**
Make sure that threads are clean and apply thread sealant to pipe threads and fittings.

1. Install oil cover (330), oil gauge (331), and bearing bracket/frame drain plug (400) to bearing bracket (301) or bearing frame (300).
2. Attach support foot (410) with bolts to bearing bracket (301) or bearing frame (300). Tighten bolts (Fig. 6-28 and 6-29).

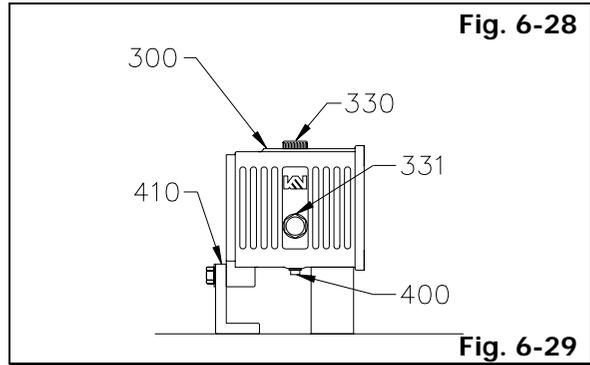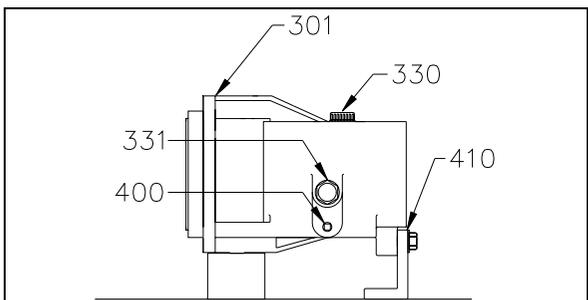

3. Install bearings (310 for KS-SR or 311 and 312 for KS-SG) on shaft (130). For KS-SR models where three (3) bearings (310) are used, install two (2) on drive end and one (1) on pump end of the shaft (130). For KS-SG models where double row drive end bearing (312) is used, install double row drive end bearing (312) on drive end and single row pump end bearing (311) on pump end of the shaft (130) (Fig. 6-30, 6-31 and 6-32).

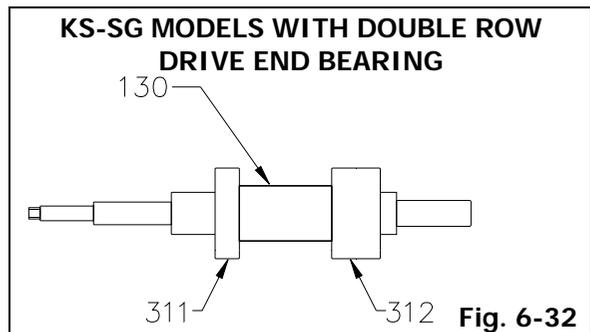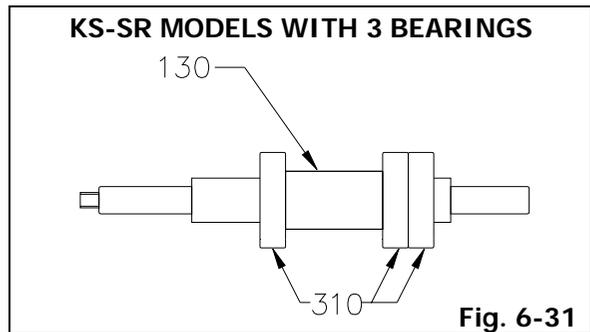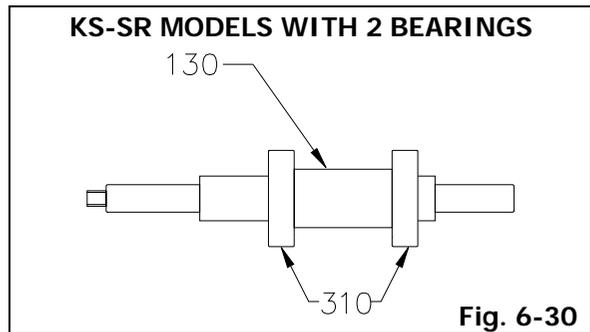

i NOTE

There are several methods used to install bearings. The recommended method is to use an induction heater to heat as well as demagnetise the bearings, coat internal surfaces of bearings with lubricant to be used in service, and then drive bearings fully on to the shaft shoulder with the aid of a piece of tubing placed against the inner race of bearings.

**WARNING**

Wear insulated gloves when using a bearing heater. Bearings will get hot and can cause physical injury.

4. Coat external surfaces of bearings (310 for KS-SR or 311 and 312 for KS-SG) with oil.
5. Coat all internal surfaces of bearing bracket (301) or bearing frame (300) with oil.
6. Install shaft assembly into bearing bracket (301) or bearing frame (300) in drive end to pump end direction by tapping with a piece of tubing placed against the inner race of drive end bearing (310 for KS-SR or 312 for KS-SG). Insert shaft assembly until the distance between bearing cover gasket (430) seat surface and drive end bearing (310 for KS-SR or 312 for KS-SG) surface is about 5mm. Check shaft (130) for free turning (Fig. 6-33).

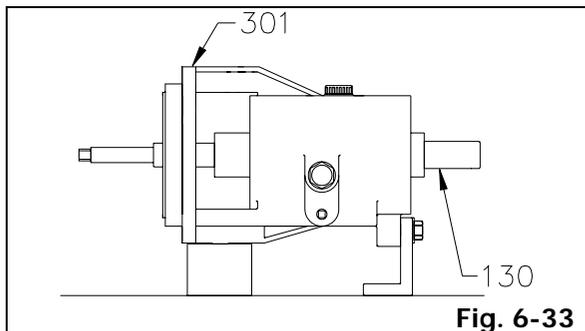


Fig. 6-33

i NOTE

Make sure the keyway edges are free of burrs.

7. Place a new bearing cover gasket (430) on bearing cover (320).

8. Coat oil seal (321) seat surface with oil. Press oil seal (321) into bearing cover (320) by hand until the shoulder of the seal is fully seated against the cover (Fig. 6-34).

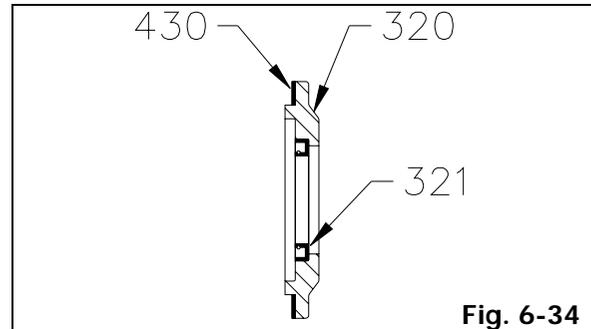


Fig. 6-34

9. Install bearing cover assembly into drive end of bearing bracket (301) or bearing frame (300). Align bolt holes and install four (4) bearing cover bolts into bearing cover (320). Tighten bolts evenly.
10. Tap the pump end bearing (310 for KS-SR or 311 for KS-SG) few times with a piece of tubing placed against the inner race of bearing to make sure drive end bearing (310 for KS-SR or 312 for KS-SG) is fully seated on bearing cover (320) (Fig. 6-35).

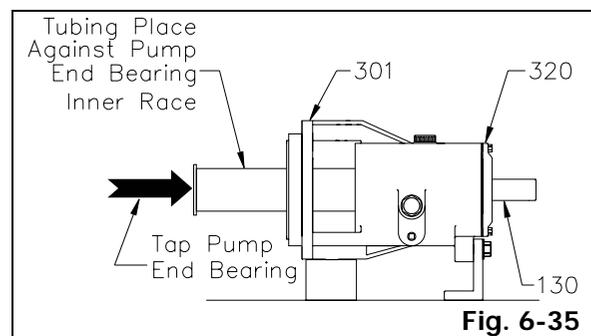


Fig. 6-35

11. For KS-SR, assemble another bearing cover assembly per instructions in steps 7 and 8. Install bearing cover assembly into pump end of bearing bracket (301). Align bolt holes and install four (4) bearing cover bolts into bearing cover (320). Tighten bolts evenly, and install deflector (440) to shaft (130).
12. Install shaft end key (136) on shaft (130) (Fig. 6-36)

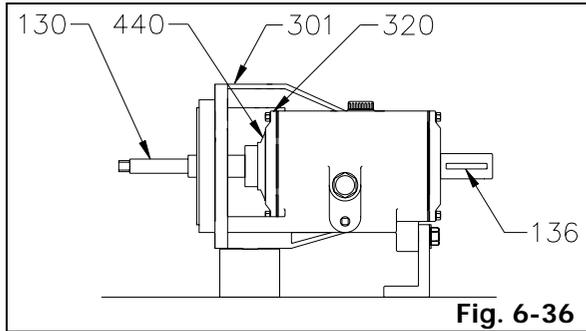


Fig. 6-36

13. Support power end assembly in horizontal position.
14. Check bearing (310 for KS-SR or 311 and 312 for KS-SG) axial clearance. Move shaft (130) forward then backward by hand, noting indicator movement. If total indicator reading is greater than 0.05mm, disassemble and determine cause (Fig. 6-37).

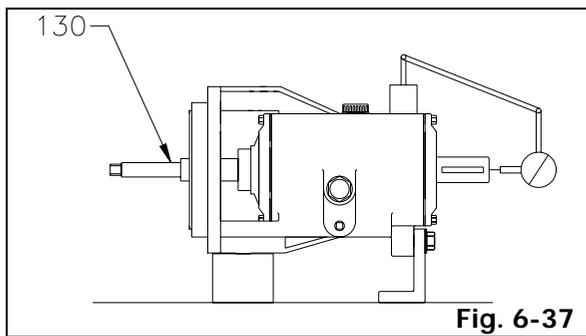


Fig. 6-37

15. Check shaft (130) or shaft sleeve (133) run out. Put on shaft sleeve (133), key for impeller (135), impeller (120), and thread on impeller nut (134), hand tight. Rotate shaft (130) 360°. If total indicator reading is greater than 0.05mm, disassemble and determine cause. Remove impeller nut (134), impeller (120), key for impeller (135) and shaft sleeve (133) (Fig. 6-38).

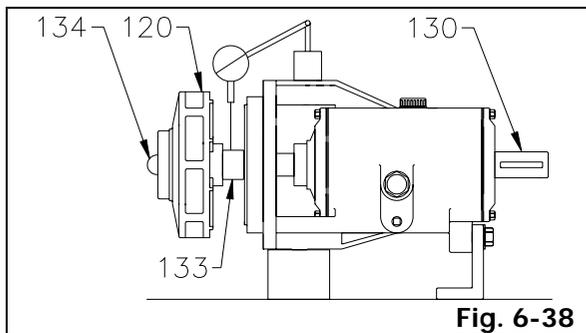


Fig. 6-38

16. For KS-SG, check bearing frame (300) face run out. Rotate shaft (130) so indicator

rides along the face for 360°. If total indicator reading is greater than 0.05mm, disassemble and determine cause (Fig. 6-39).

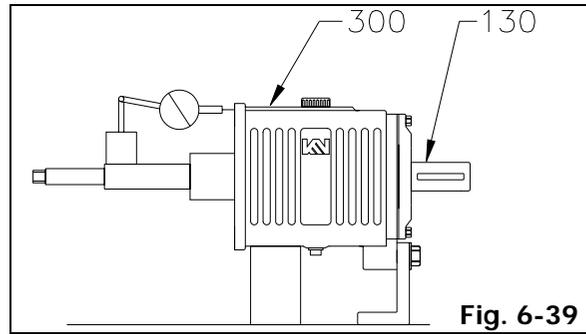


Fig. 6-39

6.3.2 Reinstallation of Frame Adaptor for KS-SG

1. Place a new frame adaptor gasket (434) on frame adaptor (220).
2. Coat oil seal (321) seat surface with oil. Press oil seal (321) into frame adaptor (220) by hand until the shoulder of the seal is fully seated against the frame (Fig. 6-40).

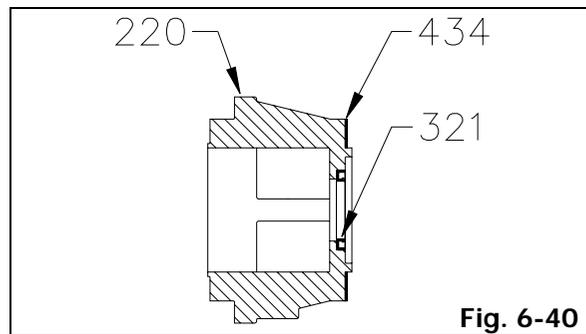


Fig. 6-40

3. Install frame adapter assembly onto bearing frame (300). Align bolt holes and install four (4) frame adaptor bolts into bearing frame (300). Tighten bolts evenly, and install deflector (440) to shaft (130) (Fig. 6-41).


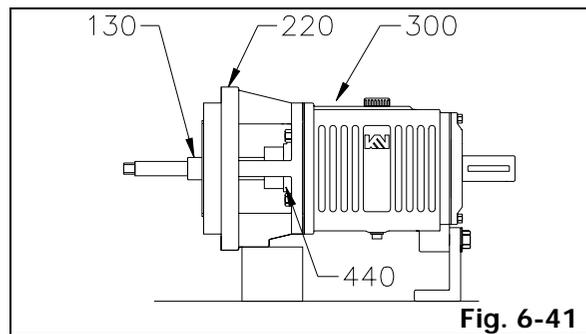



Fig. 6-41

6.3.3 Reinstallation of Adaptor Extension Ring

1. For pumps furnished with adaptor extension ring (221), install adaptor extension ring (221) onto bearing bracket (301) or frame adaptor (220). Align bolt holes and install eight (8) or twelve (12) adaptor extension ring bolts. Tighten bolts evenly (Fig. 6-42).

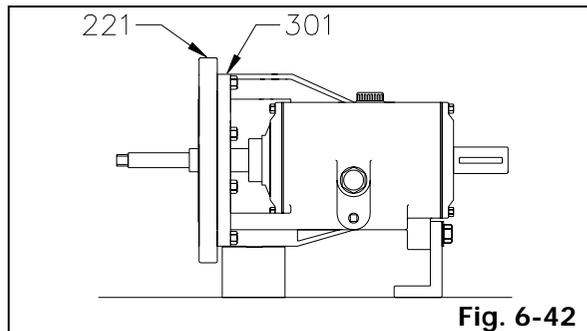

2. Check bearing bracket (301) or frame adaptor (220) and adaptor extension ring (221) fits. Rotate shaft (130) through 360°. If total indicator reading is greater than 0.13mm, determine the cause and correct before proceeding (Fig. 6-43).


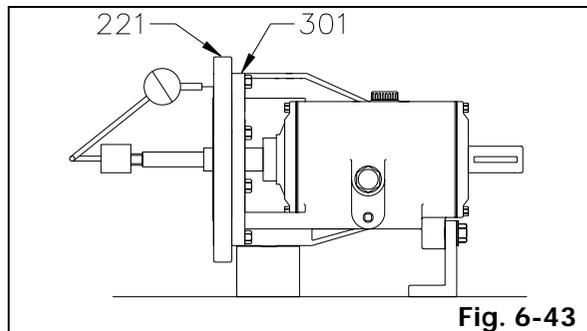


6.3.4 Reinstallation of Shaft Sealing into Stuffing Box Cover or Seal Cover

Mechanical Sealing

1. Coat mechanical seal (200) seat surface in stuffing box cover (212) or seal cover (215) (for KS-SR model with discharge diameters 125 and 150mm) with oil. Carefully place the stationary portion of mechanical seal (200) into position and press gently by hand until the shoulder of the seal is fully seated against the stuffing box cover (212) or seal cover (215) (for KS-SR model with discharge diameters

125 and 150mm). Make sure that the lapped face of seal is facing outside (Fig. 6-44 and 6-45).

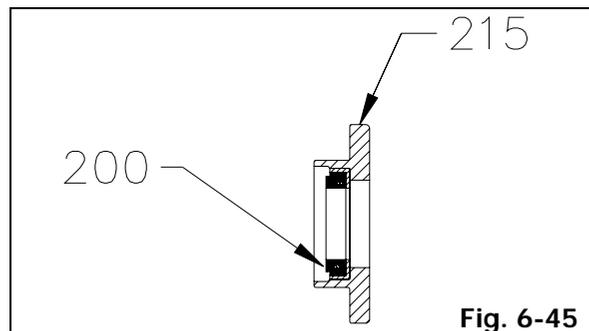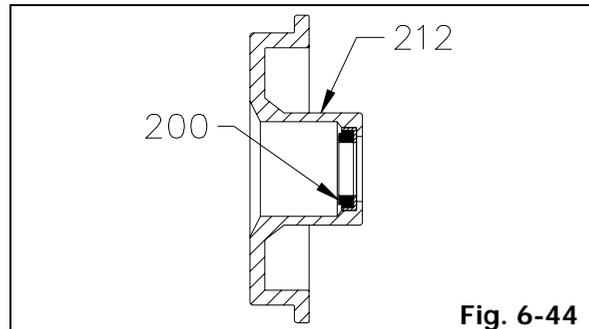


CAUTION

The mechanical seal face must be handled with care, ensuring clean and free from scratches, otherwise they are unfit for use.


2. Clean the sliding face with lint free cloths to make sure seal face is in a completely dry, dust free and clean state.

Gland Packing



1. Place a new uncut packing (201) round a shaft or round a mandrel of the shaft sleeve (133) diameter.
2. To assist in cutting rings, two guide lines parallel to the shaft axis and separated by a distance equal to the packing section may be drawn on the spiral (Fig. 6-46).

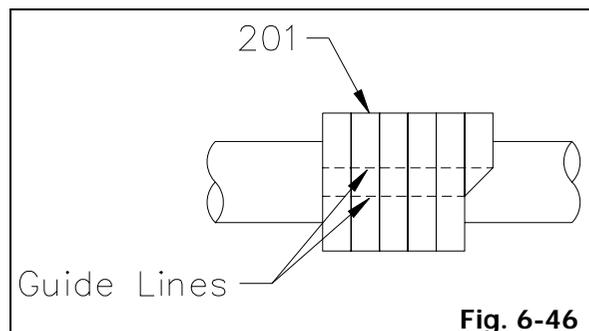

3. Cut four (4) packing rings (201) from the spiral at an angle of 45° diagonal across the guidelines with no gap is left between the ends (Fig. 6-47).

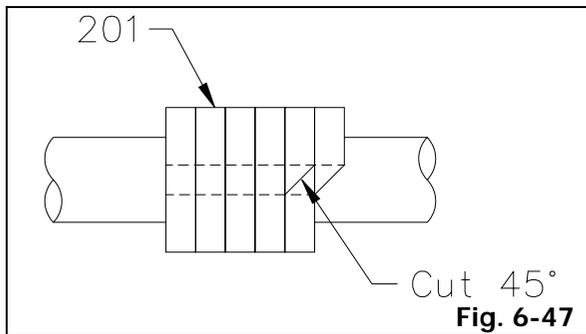


4. Saturate packing (201) well with oil.
5. For all KS-SR model except models with discharge diameters 125 and 150mm, install end ring (214) into stuffing box cover (212). Align bolt holes and install three (3) end ring bolts. Tighten bolts evenly.
6. Insert a packing (201) into stuffing box cover (212) by hand until the packing (201) is fully seated against the end ring (214) or stuffing box cover (212) (for KS-SR model with discharge diameter 125 and 150mm), then follow by second, third, fourth and fifth packing (201) (numbers of packing used depend on the model). Stagger all packing ring joints at 90° intervals (Fig. 6-48 and 6-49).

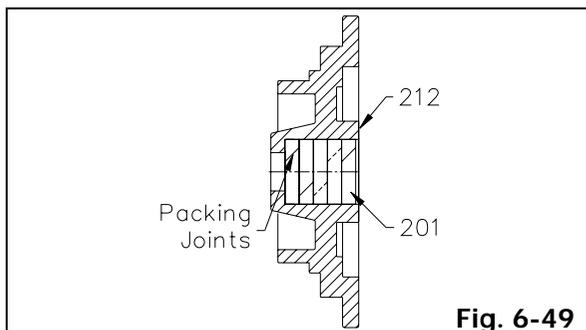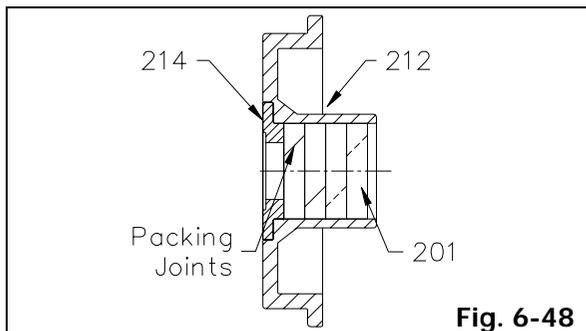


6.3.5 Reinstallation of Stuffing Box Cover for All Types Except KS-SR Model with Discharge Diameters 125 and 150mm

Mechanical Sealing

1. Place stuffing box cover gasket (431) onto stuffing box cover (212) assembly (Fig. 6-50).

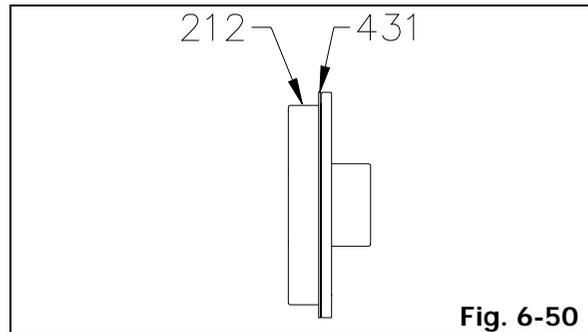

2. Install stuffing box cover (212) assembly, with stationary portion of mechanical seal (200) and stuffing box cover gasket (431), onto bearing bracket (301), adaptor extension ring (221) or frame adaptor (220) (Fig. 6-51).

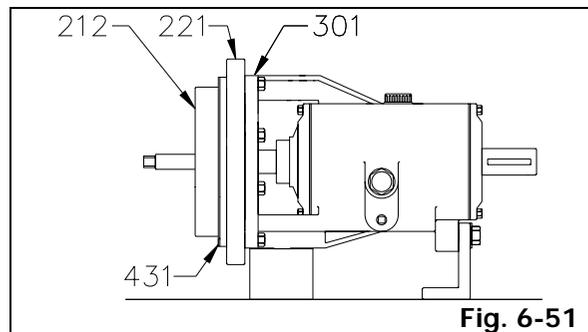

CAUTION

Be careful not to damage the stationary portion of mechanical seal seated on stuffing box cover while installing stuffing box cover assembly.

3. Check stuffing box cover (212) run out. Clamp stuffing box cover (212) tight to bearing bracket (301), adaptor extension ring (221) or frame adaptor (220). Rotate shaft (130) through 360°. If total indicator reading is greater than 0.13mm, determine cause and correct before proceeding (Fig. 6-52).

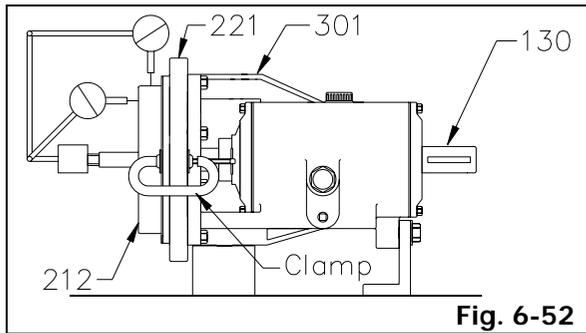


Fig. 6-52

4. For KS-SR, coat shaft (130) surface with oil, slide the rotary portion of mechanical seal (200) carefully onto shaft (130) by hand until the lapped surfaces of the mechanical seal (200) are seated on each other. Install shaft sleeve (133) onto shaft (130) until shaft sleeve (133) is fully seated on the spring cap of the mechanical seal (200) (Fig. 6-53).

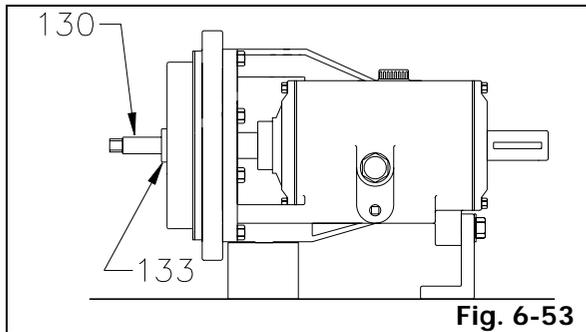


Fig. 6-53

5. For KS-SG, coat shaft sleeve (133) surface with oil, slide the rotary portion of mechanical seal (200) carefully onto shaft sleeve (133) by hand until the spring of the mechanical seal (200) is fully seated on shaft sleeve (133) (Fig. 6-54).

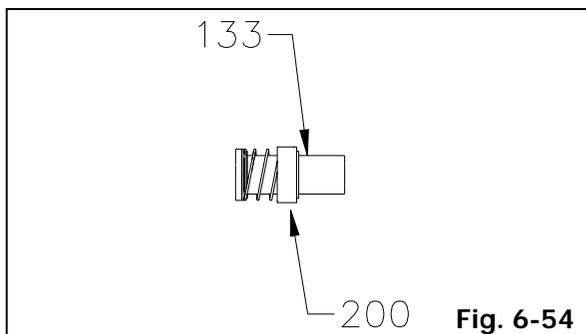


Fig. 6-54

6. Install shaft sleeve (133) assembly, with rotary portion of mechanical seal (200), carefully onto shaft (130) until the lapped surfaces of the mechanical seal (200) are seated on each others. Install shaft sleeve gasket (437) onto shaft (130) until shaft

sleeve gasket (437) is fully seated on shaft sleeve (133) (Fig. 6-55).

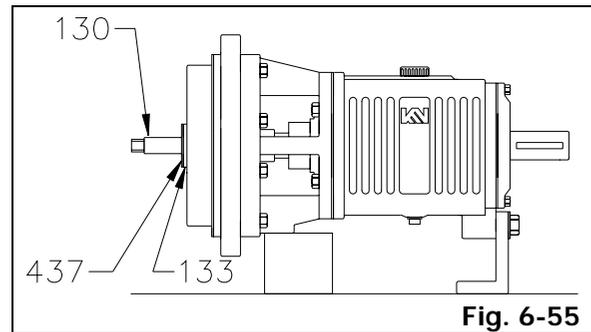


Fig. 6-55



CAUTION

Be careful not to damage the mechanical seal surfaces while installing, otherwise they are unfit for use.

Gland Packing

1. Install two (2) stuffing box cover studs and place stuffing box cover gasket (431) onto stuffing box cover (212) assembly (Fig. 6-56).

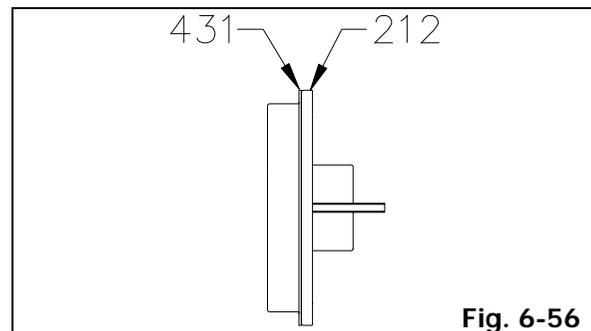


Fig. 6-56

2. Install gland (213), shaft sleeve "O" ring (423) and shaft sleeve (133) to shaft (130). Make certain that shaft sleeve (133) is fully seated on shaft (130) (Fig. 6-57).

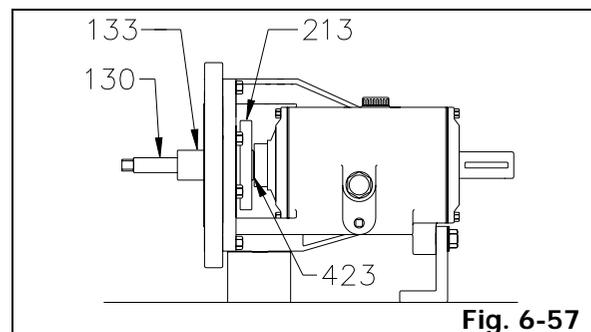


Fig. 6-57

3. Install stuffing box cover (212) assembly, with end ring (214), packing (201),

stuffing box cover gasket (431) and stuffing box cover studs as a unit onto bearing bracket (301) or adaptor extension ring (221) (Fig. 6-58).

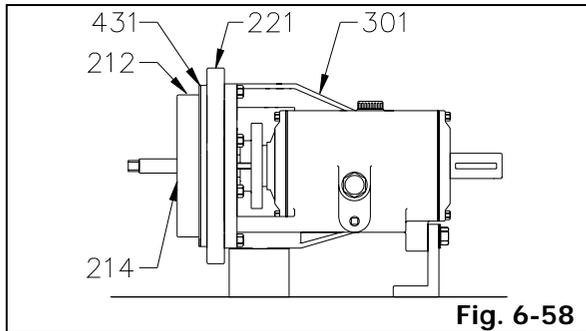


Fig. 6-58

4. Allow stuffing box cover studs go through two (2) bolt holes on gland (213), and move gland (213) into stuffing box cover (212). Install two (2) gland nuts after the gland (213) and tighten the nuts evenly until snug, then back off the nuts and tighten them again with fingers only (Fig. 6-59).

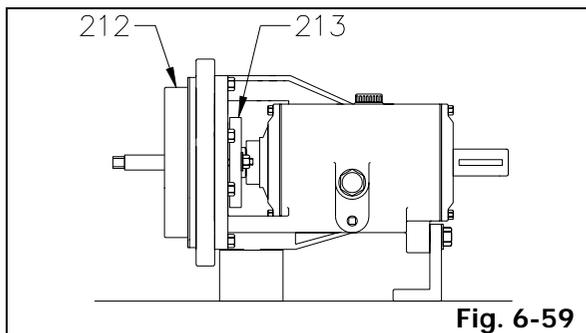


Fig. 6-59

5. Check stuffing box cover (212) run out. Clamp stuffing box cover (212) tight to bearing bracket (301) or adaptor extension ring (221). Rotate shaft (130) through 360°. If total indicator reading is greater than 0.13mm, determine cause and correct before proceeding (Fig. 6-60).

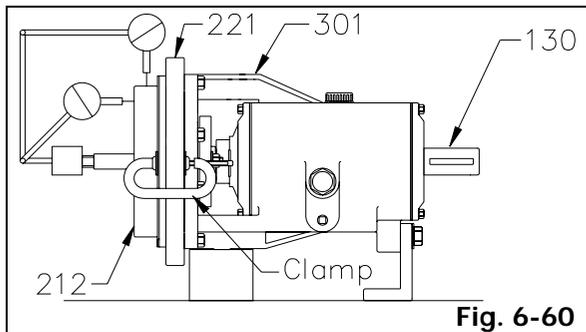


Fig. 6-60

6.3.6 Reinstallation of Stuffing Box Cover for KS-SR Model with Discharge Diameters 125 and 150mm

Mechanical Sealing

1. Place the rotary portion of mechanical seal (200) carefully into stuffing box cover (212). Make sure that the lapped face of seal is facing outside (Fig. 6-61).

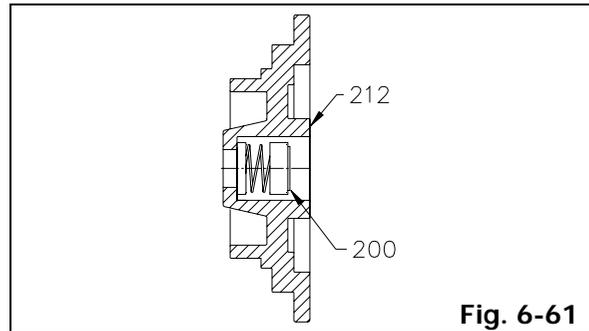


Fig. 6-61

2. Place stuffing box cover gasket (431) onto stuffing box cover (212) assembly and seal cover gasket (438) onto seal cover (215) assembly.
3. Install seal cover assembly, with stationary portion of mechanical seal (200) and seal cover gasket (438), into stuffing box cover (212) assembly. Align bolt holes and install two (2) seal cover bolts. Tighten bolts evenly (Fig. 6-62).

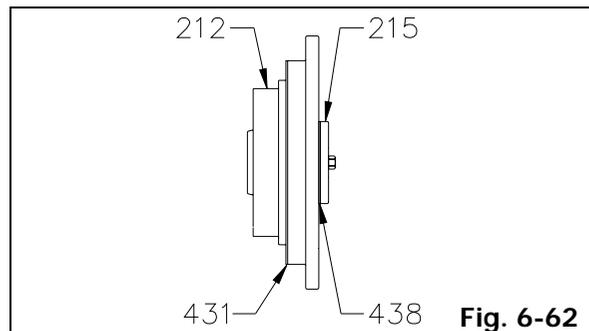



Fig. 6-62

4. Coat shaft (130) surface with oil. Carefully install stuffing box cover (212) assembly onto bearing bracket (301), with shaft (130) going through the mechanical seal (200) seated inside the stuffing box cover (212) assembly. Align stuffing box cover bolt holes and install eight (8) stuffing box cover bolts. Tighten bolts evenly.


CAUTION

Be careful not to damage the mechanical seal seated inside the stuffing box cover assembly while installing, otherwise they are unfit for use.

5. Install shaft sleeve (133) onto shaft (130) until shaft sleeve (133) is fully seated on the spring cap of the mechanical seal (200) (Fig. 6-63).

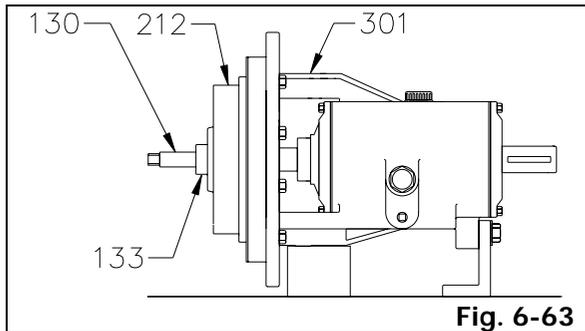


6. Check stuffing box cover (212) run out. Rotate shaft (130) through 360°. If total indicator reading is greater than 0.13mm, determine cause and correct before proceeding (Fig. 6-64).

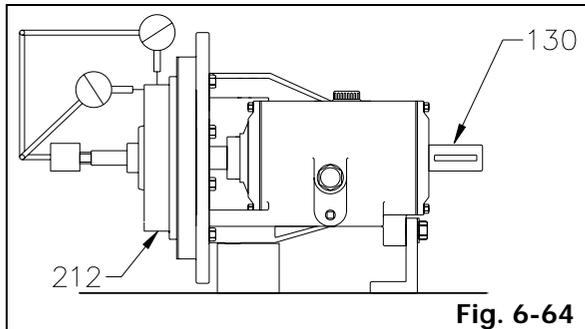


Gland Packing


1. Install two (2) stuffing box cover studs and place stuffing box cover gasket (431) onto stuffing box cover (212) assembly (Fig. 6-65).

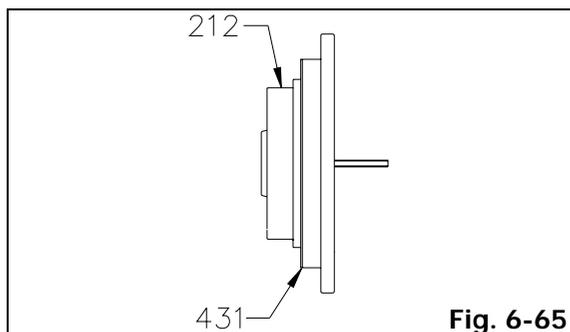


2. Install gland (213), shaft sleeve "O" ring (423) and shaft sleeve (133) to shaft (130). Make certain that shaft sleeve (133) is fully seated on shaft (130) (Fig. 6-66).

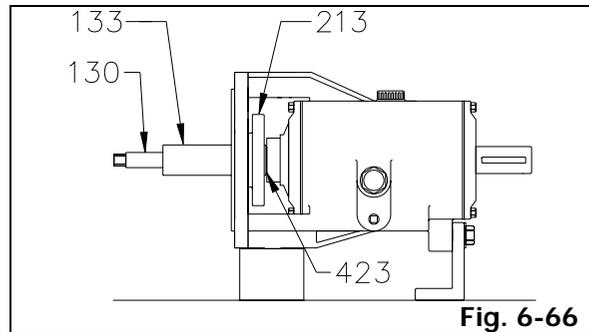

3. Install stuffing box cover (212) assembly, with packing (201), stuffing box cover gasket (431) and stuffing box cover studs as a unit onto bearing bracket (301). Align stuffing box cover bolt holes and install eight (8) stuffing box cover bolts. Tighten bolts evenly (Fig. 6-67).

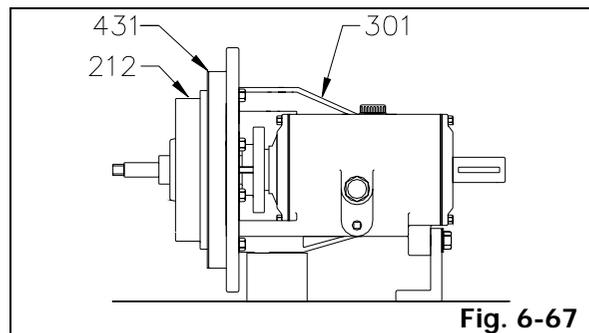

4. Allow stuffing box cover studs go through two (2) bolt holes on gland (213), and move gland (213) into stuffing box cover (212). Install two (2) gland nuts after the gland (213) and tighten the nuts evenly until snug, then back off the nuts and tighten them again with fingers only (Fig. 6-68).

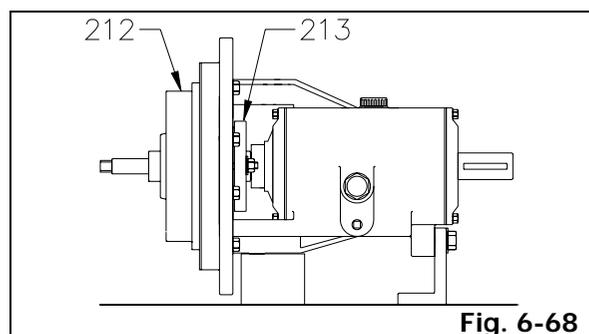

5. Check stuffing box cover (212) run out. Rotate shaft (130) through 360°. If total indicator reading is greater than 0.13mm, determine cause and correct before proceeding (Fig. 6-69).

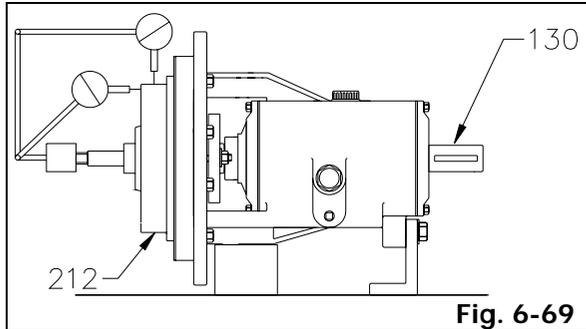


Fig. 6-69

6.3.7 Reinstallation of Impeller

WARNING

Wear heavy work gloves when handling impellers as sharp edges may cause physical injury.

NOTE

It is recommended that the bearing bracket frame support foot be clamped to the workbench when installing the impeller.

1. Install key for impeller (135) on shaft (130) (Fig. 6-70).

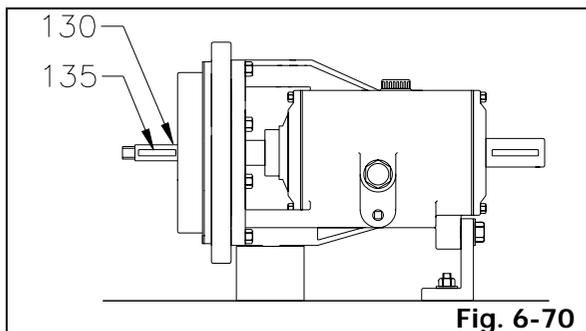


Fig. 6-70

CAUTION

Make sure mechanical seal is seated properly onto shaft sleeve while installing key for impeller, otherwise may damage the mechanical seal.

2. Install impeller (120) to shaft (130).

3. Install impeller nut (134) to shaft (130) by turning impeller nut (134) clockwise (viewed from the impeller end of the shaft) by hand until it is tightened.
4. Slide spanner over the shaft (130) and shaft end key (136). Hold the spanner on the workbench or a solid block and make sure the power end is secure on the work surface.
5. Place another spanner over impeller nut (134). Turn spanner clockwise (viewed from the impeller end of the shaft) to tighten impeller nut (134) properly (Fig. 6-71).

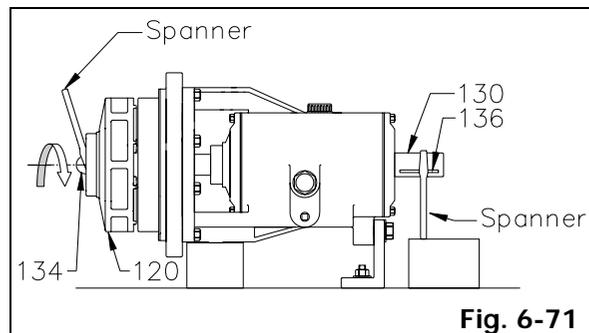


Fig. 6-71

6. Check impeller (120) run out. Rotate impeller (120) through 360°. If total indicator reading is greater than 0.13mm, determine cause and correct before proceeding (Fig. 6-72).

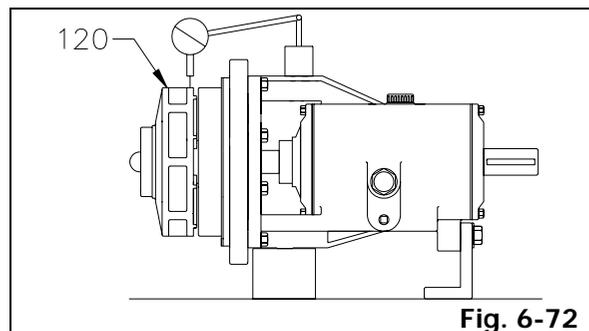


Fig. 6-72

6.3.8 Reinstallation of Pump to Base Plate

1. Install coupling or pulley to shaft (130) until coupling or pulley hub reach the hub location marking which have been made on shaft (130) during disassembly (Fig. 6-73).

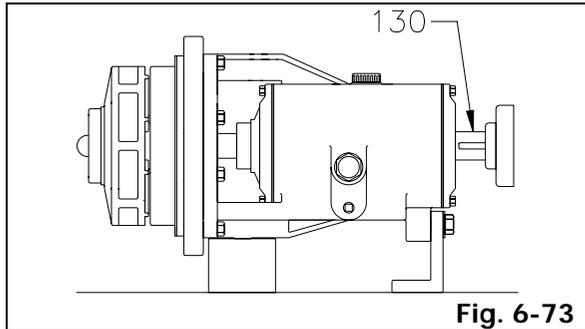


Fig. 6-73

2. Place sling from hoist through bearing bracket (301) or frame adaptor (220).
3. Install back pull out assembly to casing (100).



WARNING

Never handle the back pull-out assembly unassisted, physical injury can occur.

4. Install casing nuts to casing studs. Casing nuts may be coated with anti-galling compound to aid disassembly. Tighten casing nuts evenly.



CAUTION

Do not over tighten casing nuts. Refer to bolts and nuts manufacturer for recommended torque values.

5. Replace shims (if used) under support foot (410), install and tighten support foot (410) hold down bolts and nuts to baseplate (Fig. 6-74).

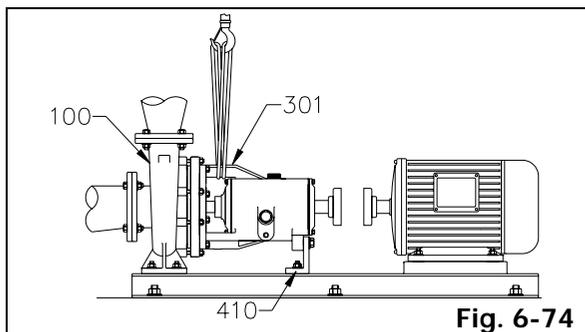


Fig. 6-74

6. Check coupling or pulley alignment per alignment procedures in section 3.6.3 *Alignment Procedures for Direct Coupled Baseplate Design* or 3.6.4 *Alignment Procedures for V-Belt Driven Baseplate Design*.

7. Replace all auxiliary piping and tubing.

6.3.9 Post Assembly Checks

After completion of these operations, check if it is possible to rotate shaft easily by hand. If all is proper, continue with pump start-up per instructions in section 4 *Operation*.

6.3.10 Assembly Troubleshooting

Excessive Shaft Play

1. *Bearing internal clearance too great* – Replace bearings (310 for KS-SR or 311 and 312 for KS-SG) with correct type.

Excessive Shaft or Shaft Sleeve Run Out

1. *Shaft or Shaft Sleeve worn* – Replace.
2. *Shaft bend* – Replace.

Excessive Bearing Bracket or Bearing Frame Face Run Out

1. *Shaft bend* – Replace.
2. *Bearing bracket or bearing frame face distorted* – Replace.

Excessive Frame Adaptor Run Out

1. *Frame adaptor corrosion* – Replace.
2. *Frame adaptor gasket not seated properly* – Reseat.

Excessive Stuffing Box Cover Run Out

1. *Stuffing box cover not properly seated on bearing bracket, adaptor extension ring or frame adaptor* – Reseat.
2. *Stuffing box cover corrosion or wear* – Replace.

Excessive Impeller Run Out

1. *Impeller corrosion or wear* – Replace.
2. *Impeller not properly installed* – Reinstall.
3. *Shaft bent* – Replace.

This Page Intentionally Left Blank


7

SPARE PARTS

Part No. Notations	-----	52
Item Codes Denomination	-----	53
KS-SR Parts List	-----	54
KS-SG Parts List	-----	55
How to Order Spare Parts	-----	56
Recommended Spare Parts	-----	56

Part No. Notations

Part No.

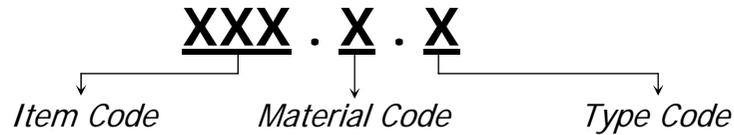

- Part No. with standard material and type are shown in the individual parts list.

Example Part No. : 120.1.C (Item = Impeller Material = SS304 Type = Closed)

Item Code

- Refer to Item Codes Denomination.
- For parts which have no variation in material and type, Part No. contains of Item Code only.

Example Part No. : 440 (Item = Deflector)

Material Code

For Item Codes 100, 120, 133, 134, 212, 213, 214, 215, 401 and 402 only :

1 = SS304	4 = Ni-Hard	7 = Galvanise Steel
2 = SS316	5 = Cast Iron	8 = Mild Steel
3 = CA40	6 = Ductile Iron	

For Item Code 200 only :

A = Carbon vs. Ceramic	Q = Silicon Carbide vs. Silicon Carbide
B = Ceramic vs. Ceramic	U = Tungsten Carbide vs. Tungsten Carbide

- Available materials for the above items in a particular pump type are depended on the product specifications.
- For parts which have no variation in type, Part No. contains of Item Code and Material Code only.

Example Part No. : 214.5 (Item = End Ring Material = Cast Iron)

Type Code

For Item Code 120 only :

C = Closed	S = Semi-Open
R = Fully-Open	F = Torque Flow

For Item Code 133 and 212 :

M = Mechanical Seal	G = Gland Packing
---------------------	-------------------

- Available types for the above items in a particular pump type are depended on the product specifications.

Example Part No. : 212.1.M (Item = Stuffing Box Cover Material = SS304 Type = Mechanical Seal)

Kewpump (M) Sdn. Bhd. reserves the right to change the materials and types to keep pace with technological progress.

Item Codes Denomination

Item Code	Designation
-----------	-------------

100	Casing
120	Impeller
130	Shaft
133	Shaft Sleeve
134	Impeller Nut
135	Key for Impeller
136	Shaft End Key


200	Mechanical Seal
201	Packing
212	Stuffing Box Cover
213	Gland
214	End Ring
215	Seal Cover
220	Frame Adaptor
221	Adaptor Extension Ring

Item Code	Designation
-----------	-------------

300	Bearing Frame
301	Bearing Bracket
310	Bearing
311	Pump End Bearing
312	Drive End Bearing
320	Bearing Cover
321	Oil Seal
330	Oil Cover
331	Oil Gauge

400	Bearing Frame Drain Plug / Bearing Bracket Drain Plug
401	Casing Drain Plug
402	Venting Plug
410	Support Foot
423	Shaft Sleeve "O" Ring
430	Bearing Cover Gasket
431	Stuffing Box Cover Gasket
434	Frame Adaptor Gasket
437	Shaft Sleeve Gasket
438	Seal Cover Gasket
440	Deflector

KS-SR Parts List

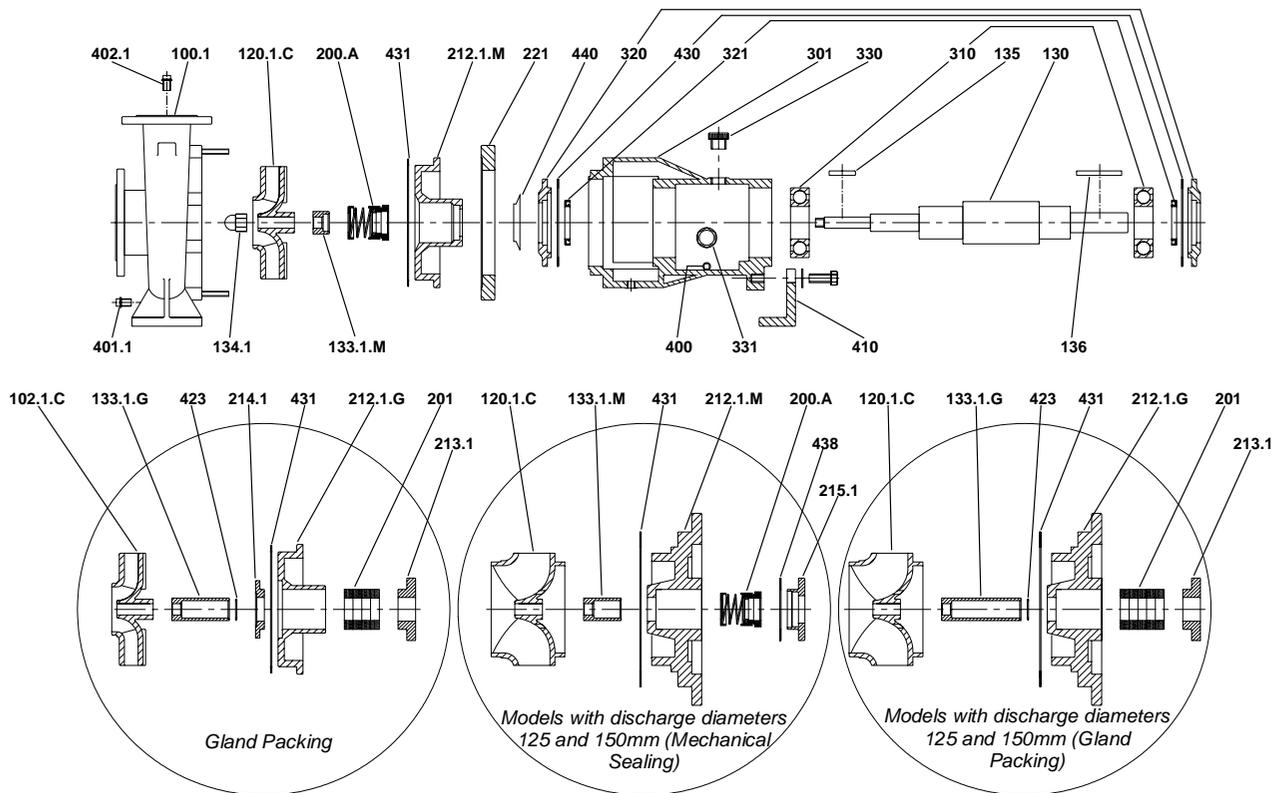


Part No.	Designation	Quantity	Material
100.1	Casing	1	Stainless Steel
120.1.C	Impeller	1	Stainless Steel
200.A	Mechanical Seal	1	Carbon vs. Ceramic
431	Stuffing Box Cover Gasket	1	P.T.F.E.
212.1.M / G	Stuffing Box Cover	1	Stainless Steel
221 *	Adaptor Extension Ring	1	Cast Iron
440	Deflector	1	Synthetic Rubber
320	Bearing Cover	2	Cast Iron
430	Bearing Cover Gasket	2	Asbestos Sheet
321	Oil Seal	2	Synthetic Rubber
301	Bearing Bracket	1	Cast Iron
330	Oil Cover	1	Aluminium Alloy
310	Bearing	2 or 3 **	Steel
135	Key for Impeller	1	Stainless Steel
130	Shaft	1	Stainless Steel
136	Shaft End Key	1	Stainless Steel
410	Support Foot	1	Cast Iron
331	Oil Gauge	1	Plastic Threaded
400	Bearing Bracket Drain Plug	1	Galvanise Steel
133.1.M / G	Shaft Sleeve	1	Stainless Steel
134.1	Impeller Nut	1	Stainless Steel
401.1	Casing Drain Plug	1	Stainless Steel
402.1	Venting Plug	1	Stainless Steel
423	Shaft Sleeve "O" Ring	1	Synthetic Rubber
214.1	End Ring	1	Stainless Steel
201	Packing	4 to 5	Asbestos
213.1	Gland	1	Stainless Steel
438	Seal Cover Gasket	1	Asbestos Sheet
215.1	Seal Cover	1	Stainless Steel

* For all sizes except 32-130, 40-130, 50-130, 65-130, 65-160, 80-160, 100-160, 100-260 and models with discharge diameters 125 and 150mm

** Depends on model

KS-SG Parts List

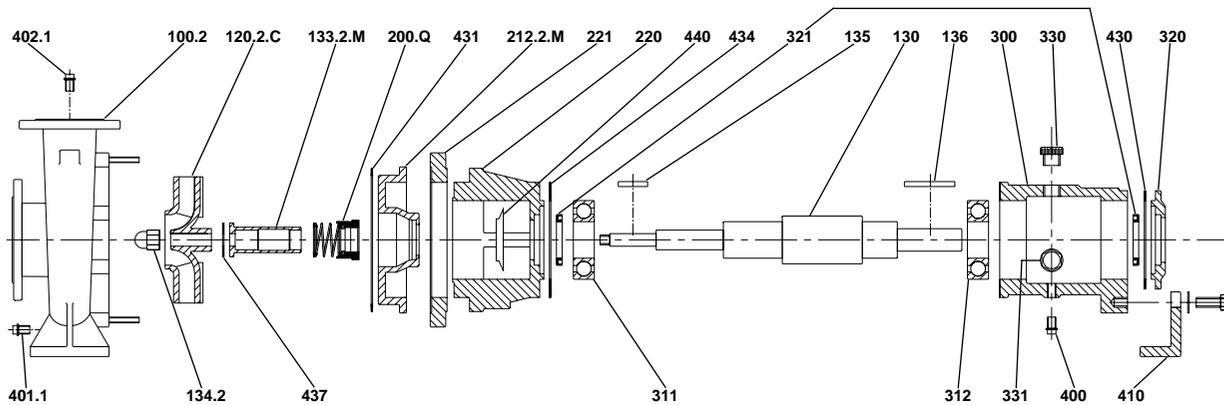

Part No.	Designation	Quantity	Material
100.2	Casing	1	316 Stainless Steel
120.2.C	Impeller	1	316 Stainless Steel
133.2.M	Shaft Sleeve	1	316 Stainless Steel
200.Q	Mechanical Seal	1	SiC vs. SiC
431	Stuffing Box Cover Gasket	1	P.T.F.E.
212.2.M	Stuffing Box Cover	1	316 Stainless Steel
221 *	Adaptor Extension Ring	1	Cast Iron
220	Frame Adaptor	1	Ductile Iron
440	Deflector	1	Synthetic Rubber
434	Frame Adaptor Gasket	1	Asbestos Sheet
321	Oil Seal	2	Synthetic Rubber
135	Key for Impeller	1	Stainless Steel
130	Shaft	1	Stainless Steel
136	Shaft End Key	1	Stainless Steel
300	Bearing Frame	1	Cast Iron
330	Oil Cover	1	Aluminium Alloy
430	Bearing Cover Gasket	1	Asbestos Sheet
320	Bearing Cover	1	Cast Iron
410	Support Foot	1	Cast Iron
400	Bearing Frame Drain Plug	1	Galvanise Steel
331	Oil Gauge	1	Plastic Threaded
312	Drive End Bearing	1	Steel
311	Pump End Bearing	1	Steel
437	Shaft Sleeve Gasket	1	Teflon Sheet
134.2	Impeller Nut	1	316 Stainless Steel
401.1	Casing Drain Plug	1	Stainless Steel
402.1	Venting Plug	1	Stainless Steel

* For impeller sizes 200mm and above

How to Order Spare Parts

(i) NOTE

By giving complete information you will enable us to fill your order correctly and avoid unnecessary delays.

When ordering spare parts, please specify:

1. Pump Type
2. Pump Model
3. Serial Number
4. Part No. (with material code and type code if available)
5. Part Description
6. Quantity

Items 1, 2 and 3 can be found from the pump nameplate, while items 4 and 5 can be found from the pump parts lists in this section.

Example:

Pump Type	:	KS-SG
Pump Model	:	80-160
Serial Number	:	GA98002PP1
Part No.	:	212.2.M (316 Stainless Steel, Mechanical Seal)
Part Description	:	Stuffing Box Cover
Quantity	:	2

Recommended Spare Parts

- | | |
|---|--|
| <ul style="list-style-type: none"> ➤ Casing (100) ➤ Impeller (120) ➤ Shaft (130) ➤ Shaft Sleeve (133) ➤ Mechanical Seal (200) ➤ Packing (201) ➤ Stuffing Box Cover (212) ➤ End Ring (214) ➤ Seal Cover (215) | <ul style="list-style-type: none"> ➤ Bearing (310 for KS-SR or 311 and 312 for KS-SG) ➤ Shaft Sleeve "O" Ring (423) ➤ Bearing Cover Gasket (430) ➤ Stuffing Box Cover Gasket (431) ➤ Frame Adaptor Gasket (434) ➤ Shaft Sleeve Gasket (437) ➤ Seal Cover Gasket (438) |
|---|--|

8 WARRANTY STATEMENT

Kewpump products are guaranteed to be free from defects in material and/or workmanship and to perform as advertised when properly installed, used and maintained per instructions in the manual. Should any part(s) prove defective within one (1) year from the date of purchase, it (they) will be replaced without charge provided the defective part(s) is returned to our factory or branch transportation charges prepaid. **Warranty is valid only when genuine Kewpump parts are used.**

Kewpump (M) Sdn. Bhd. will not be responsible for labour charges, loss, or consequential damage of any kind of character caused by defective parts or for charges incurred in the replacement or repair of defective parts by Purchaser. This warranty does not apply when damage is caused by sand or abrasive materials, chemical deposits, corrosion, or wear and tear unless written approval is obtained in advance from Kewpump (M) Sdn. Bhd.. Careless handling and improper installation or use may void all warranties.

Drivers that are furnished with part of our own manufacture to make complete pumping units are warranted as to workmanship and materials for a period of six (6) months from date of purchase. Should any failure occur within six (6) months period, determination of warranty responsibility can be made only by the driver companies or their service shops. An inoperative unit should be taken to an authorised service shop and, according to the service shop's determination of the cause of failure, the actual repair will be either charged to the customer or put on a no charge basis. If the repair is on a no charge basis, it will not cover removal or reinstallation charges, mileage, service calls, or other charges not part of the actual repair.

Kewpump (M) Sdn. Bhd. must be notified of a failure within the warranty period and will then supply instructions to Customer or Dealer.

The forgoing states the Company's entire liability for any claim to damages whatever, and is made by Company and accepted by Purchaser in lieu of all other warranties, obligations, or liabilities expressed or implied.

 **KEWPUMP®**

