


Friction Loss in Piping

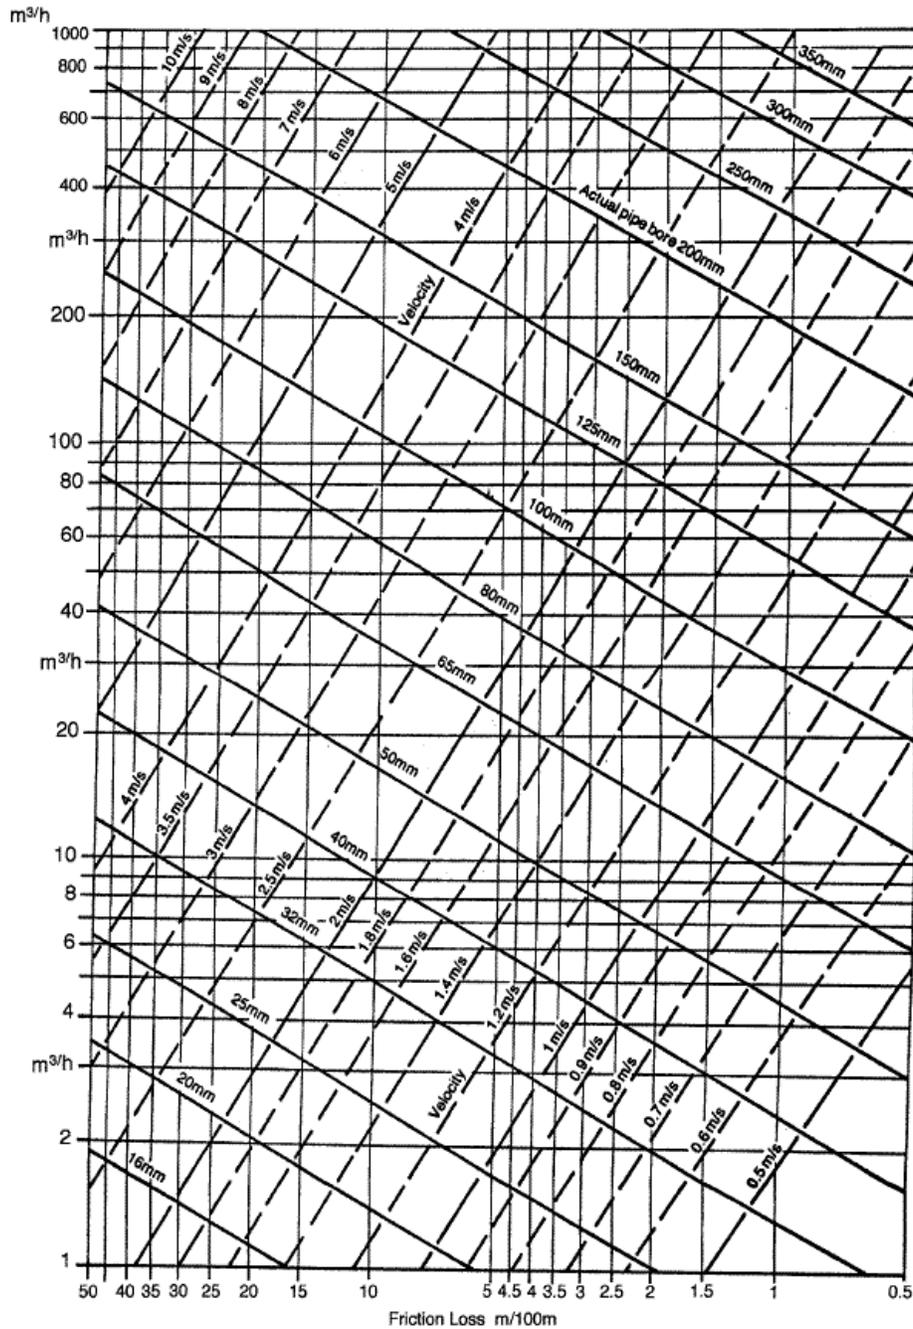

Notes:-

- The losses are calculated for a fluid viscosity similar to fresh water at 15°C
- Use actual bores rather than nominal pipe size
- For stainless steel pipe multiply the numbers by 1.1
- For steel pipe multiply the numbers by 1.3
- For cast iron pipe multiply the numbers by 1.7